on the top of the master cylinder and a bottle (which contains the brake fluid) is kept at certain height as shown in Figure and connected it through the pipe lines with master cylinder.

The Bleeder valve in wheel cylinder must be connected with one end of the bleeder pipe and other end dipped in the brake fluid in the bottle which is filled by one third of brake fluid inside the container. Now by pressing the brake pedal randomly, the air bubbles presents inside the master cylinders and pipe lines are purged out by the brake fluid to the container placed in the floor through the bleeder valve and bleeder pipe.

After purging the air bubbles by repeatedly pressing the brake pedal, the pipe line which is connected to the bleeder valve has to be removed and the tube connected to the filler cap must be closed. The same procedure should be followed for all the four wheels. Initially the air bubbles must be purged from the wheels which are far away from the master cylinder. by the following air bleeding procedure for the wheels which are far away from the wheel cylinders. After removing the air bubbles from all the wheels the brake fluid must be poured into the reservoir and the tank must be filled.

6.4.2 Air Brake

Introduction

Generally the performance of hydraulic brake is based on the amount force applied on the brake pedal by the driver. Hence for obtaining high braking force the driver has to press the brake pedal at high force. This causes the driver more tiresome. To eliminate this difficulty and obtaining maximum braking force by less pressing, other brake systems such as air type, vacuum type and electric type brakes are used. The air brake is discussed in the following section. Absorbing the ambient air, compressing it to a very high pressure and operating the braking system is called as air brake which is used mostly in all vehicles. The construction of the normal air brake is shown in Figure. The brake cam 'S' placed on the brake carrier plate is actuated by the pressurized air obtained from the air compressor operated by the engine. Hence the brake shoes are

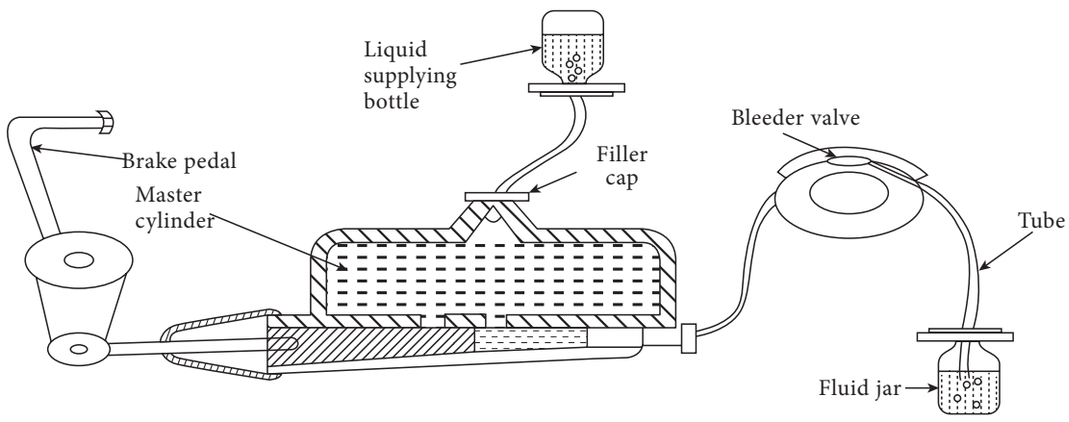


Figure 6.4.1.6 Bleeding system in hydraulic brake

BAE_ENG_Chapter_06.indd 103 12/20/2019 1:04:21 PM