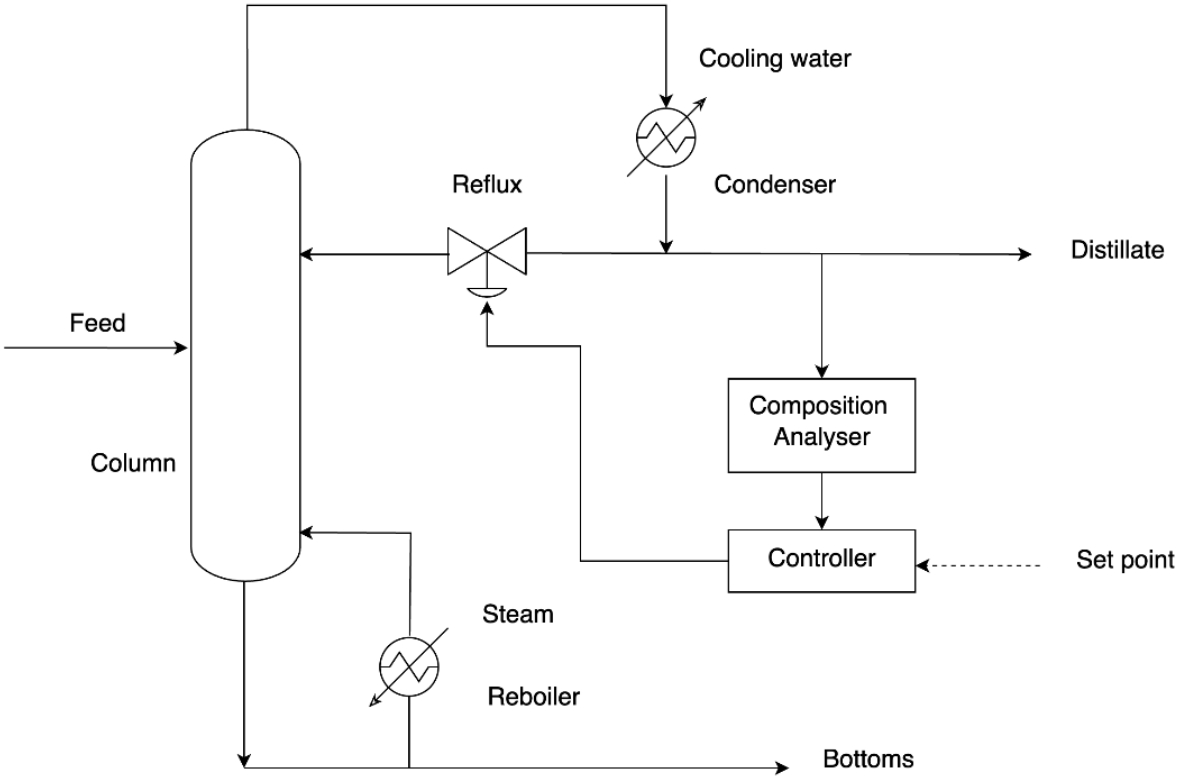


Figure 2.5 A simple example of a process flow diagram (PFD) showing the components of a chemical process using standard symbols to represent physical components and their relationships.

Another type of engineering document that is important within many industrial contexts is a *piping and instrumentation diagram (P&ID)*. These documents represent the engineering view of an industrial process (such as an oil refinery), showing the complex relationships between equipment, piping, and instrumentation, creating a comprehensive schematic blueprint of the physical process, again using standardized symbols to represent the physical arrangement of components and the functional relationships between them. A simple example of a P&ID is shown in figure 2.6 and represents a tank and a pump and the connections between them, including representation of the instruments that measure aspects of this process, including the level of liquid in the tank and the pressure within the pipe from the pump.