



Apply a thin film of thermal paste to the heat sink


processor. Push the clips provided on the heat sink into place on the motherboard until it gets locked. Double-check this procedure because if this is done wrong, you might end up with a fried processor.

Installing RAM: Align the memory modules along the slots provided on the motherboard. The modules go in only one way so this is a simple step to execute. Press the modules until the side levers lock them.




Mounting the motherboard to the case: Now align the back panel to the side of the cabinet and screw the motherboard back onto the cabinet. Don't forget to keep your motherboard manual beside you so you can refer to it in case of any problems.


Connecting power and data cables: Now connect all the drives, including the hard drive and floppy drives to the motherboard using the IDE cables. Connect the hard drive cable to the Primary IDE slot on the motherboard. The IDE slot is usually a long two-pin wide slot. You can connect the CD drive and the other drives to the other cable. A similar smaller slot is available for the floppy drive. Connect the main power cable, which runs from the SMPS to the motherboard. While fixing up the power supply, make sure that the motherboard has support for the AT or ATX power supply. Connect the proper cable to the motherboard. Also remember to connect the cabinet buttons and the internal speakers to the

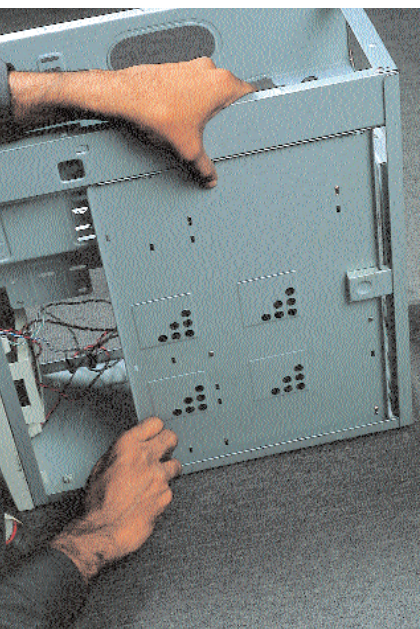

Mount the motherboard back to the case

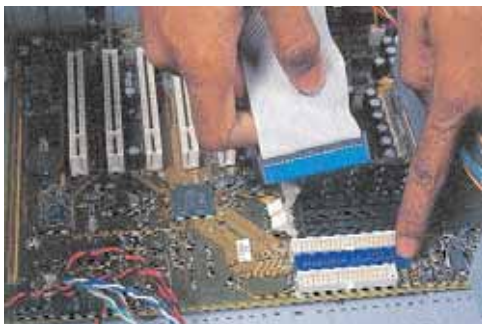

Connect the hard drive cable to the primary IDE slot

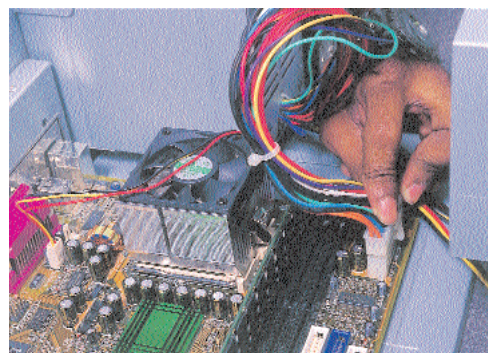

Install the power supply. Connect the main power cable to the motherboard

motherboard using the fine cables. Refer the motherboard's manual to ensure that the right cable goes to the right pins on the motherboard. **Connecting the hard drive and the CD-ROM drive:** Place the hard drive in the space provided in the cabinet and firmly screw it to the side panel. For the CD-ROM drive you will find an opening in the front of the cabinet. Insert it



through this opening and tighten the screws from the sides.

Connecting the data cables to the drives: Now connect the data cables provided with the drives. The right way of doing it is indicated in the screenshot.



Mount the hard drive; Inset: mount the CD-ROM drive



Make sure the conductor of the IDE cable which is coloured red is adjacent to the power connector →