

FAQs

Boot the multi-boot menu

Q, I have an Intel 933 MHz on an Intel MB815e motherboard, and an ATX power supply, running Windows 98 SE and Windows XP. The PC works perfectly except that when it shuts down it displays "It's now safe to turn off your computer", instead of directly shutting down.

My second problem is that I have formatted my D drive, where Windows XP was installed, but still get the menu to choose which operating system to boot from. How do I solve these problems?

Ruhit

A Ok here's what you have to do; to fix the shutdown problem, go to the CMOS BIOS settings by pressing [Delete] when the PC boots. Go to the Power Management option in the BIOS menu and enable ACPI, press [Esc], save changes to CMOS and exit the BIOS screen.

Now, for your second problem, right-click My Computer and go to **Properties > Advanced** and click on Settings in the 'Startup and Recovery' section. Here, set the 'Default operating system:' to Windows 98, and set the 'Time to display list of operating systems:' to zero. The boot menu option will not be displayed thereafter. A definitive solution involves modifying the boot.ini file. Click on Edit in the same tab to open the Boot.ini file in Notepad. Here, change the default entry to **default= c:**, and delete the line **multi(0)disk(0)rdisk(0)partition(2)\WINDOWS="Microsoft Windows XP Professional"**

/fastdetect. This successfully clears the boot menu.

Windows XP doesn't install

Q, I have a Pentium III 933 MHz with Intel 815EEa2 computer. My problem is that I cannot install Windows XP. When I restart, it shows an error stating "error: unmountable_boot_volume". I recreated the partition and then formatted the hard disk, but still it did not work. What should I do?

Ryan

40-conductor cable



80-conductor cable



Use an 80-conductor cable to connect UDMA drives, instead the standard 40-conductor cable

A This occurs if your computer uses an Ultra Direct Memory Access (UDMA) hard disk controller, and the following conditions are true: You use a standard 40-conductor connector cable to connect the UDMA drive to the controller, instead of the required 80-conductor cable, and the basic input/output system (BIOS) set-


tings are configured to force the faster UDMA modes.

Replace the 40-conductor cable with an 80-conductor UDMA cable. Simultaneously, in the BIOS settings for your computer, load the 'Fail-Safe' default settings and then reactivate the most frequently used options such as USB Support.

I lost my Red Hat

Q, I run Windows Me and recently installed Red Hat Linux 7.2, after which it showed the LILO boot menu. Next, I installed Windows XP but the LILO boot menu disappeared. Now, I have to use a Linux boot disk just to run Linux. How do I fix this?

Seejo

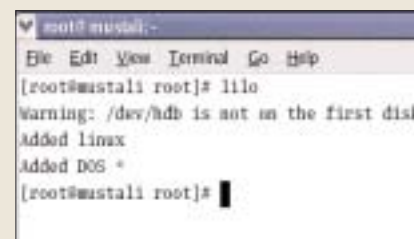

You can repair your LILO boot manager from within Linux

A There's no need for concern—Windows always overwrites other boot loaders. To fix your system, you have to boot into Linux using the boot disk you have. Login as root and go to the command prompt and type 'lilo' and press [Enter]. You should see something like 'DOS added' or 'Linux added'. Now restart your PC, and the problem will be fixed.

referring to Help but everything seemed to be in order. I re-installed the software but the problem persisted. I am able to play my sound files in all other programs.

Dev

A This error is caused if any or all of the following files are missing or corrupted: Msvideo.dll, Dciman.dll or Mciavi.drv—all located in the Windows System folder. Reinstalling a multimedia component from **Control Panel > Add/Remove Programs** does not replace these system files. You will have to run Windows Setup from within Windows, as then you are prompted to choose

between running a complete set up and copying all the files again—choose the 'Copy all files again' option and your problem will be fixed.

Another way to do this is to extract only the files you need from the Windows CD, using System File Checker (SFC). To start SFC, go to **Start > Run**, type 'sfc' and press OK. Next, click on 'Extract one file from installation disk', type the file name 'Msvideo.dll' and press Start. The next screen will show you where to 'Restore from' and the location to 'Save file in'—press OK. Repeat the steps for all the files mentioned above.

PC to PC

Q, I want to know how to connect my PC to my friend's PC, who lives around 2 Km away from my house. We both have phones and modems, and do not want to buy any extra hardware. We both run Windows 98. Can we do this?

Vishal

A Sure you can. Just go to **Start > Programs > Accessories > Communication > Hyper Terminal** on both PCs. Now either you or your friend can call each other using your modems, and transfer data just as if you were on a network.