



Stay tuned

Exciting projects coming your way next month in our anniversary special

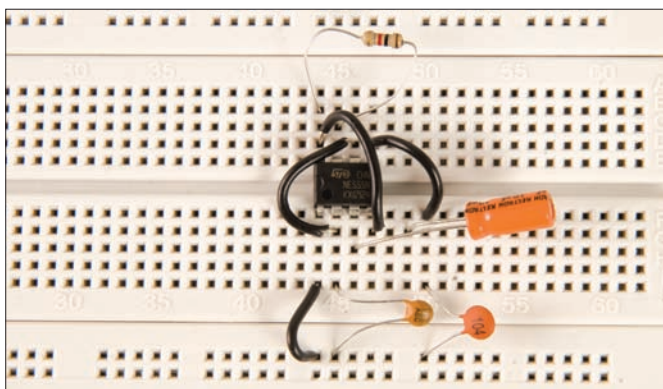

You're nearly done. You need to connect the probe from pin 7 to the presets

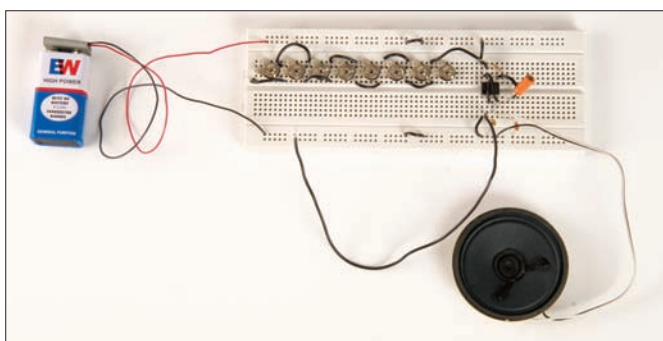

The complete piano. Preset arranged on the left. The long black wire serves as your probe. Touching them to the end of each preset plays a note from the speaker

resistor-capacitor combination. In the pocket piano, the resistors that are needed for calculations are $R1 - 1k$, $R2 - 100k$ preset and $C - 0.1 \mu F$.

The formula to calculate the frequency is $F = 1.44 / ((R1 + 2R2) * C1)$. The values of resistors are in Ohms and capacitors are in Farads. Effectively, the note with the lowest frequency is $C4$ (262 Hz). To

check the resistance values and then tune the presets till you get the required resistance values.

Once you've got the correct values, you can assemble the circuitry together. Preferably use soft push-to-on switches to get a feel of a piano.

Connect the speaker between pin 3 and ground (negative terminal of the battery). In order to get the desired

C#	Eb		F#	G#	Bb		C# 1	Eb 1		F# 1	G# 1	Bb 1		
C	D	E	F	G	A	B	C1	D1	E1	F1	G1	A1	B1	C2

You can arrange the keys as shown here. To repeat the second octave, use the frequencies for $C5$ to $B5$ from the accompanying table

calculate the value of resistance to which you need to set the preset, use the formula

$$R2 = (1.44 / FC1) - R1 / 2$$

Using this formula, you'll arrive at approximately 21k for 330Hz, 20k for 349Hz and so on. Using a multimeter,

tone, touch the probe connected to pin 2 and 6 to the preset. Connect pin 1 to ground and pins 4 and 8 to the positive terminal of battery. If you have connected the circuitry correctly, you should hear the notes distinctly. 



STRONTIUM™
NEVER LETS YOU DOWN

Power Up

Memory Module
MicroSD Card
External Hard Disk
USB Flashdrive



High Performance Memory

- Lifetime Warranty
- Major Brand Chipset

STRONTIUM TECHNOLOGY INDIA PVT. LTD.

F-10 2nd Floor, Kalkaji, New Delhi - 110019

Phone No: +911140568675

Sales Query: indiasales@strontium.biz RMA or

Technical Query: techsupport@strontium.biz

www.strontium.biz