

CAMERA TESTING

Run the capture_viewer application from the startup menu: Startup→Intel® Perceptual Computing SDK 2013→Tools→Capture Viewer as follows:

- Launch the capture_viewer application
 - Select a color stream, a depth stream and an audio stream from the DepthSense 325 Audio/Video Capture module.
 - Select Control→Display to render the streams
- You should see three windows showing the color pictures, the depth map, and a visualization of audio channel(s) as illustrated in Figure 3.

MICROSOFT* VISUAL STUDIO* 2008/2010 SETUP

The SDK installer sets an environment variable PCSDK_DIR to point to the SDK installation directory. The developer can use this environment variable to set the include and library paths in the Microsoft Visual Studio environmental settings.

The steps for setting up Microsoft Visual Studio 2008/2010 are similar except that for Microsoft Visual Studio 2008, the settings are global in Tools→Options→Project and Solutions → VC++ Directories, while in Microsoft Visual Studio 2010, the settings are part of an existing or newly created project properties:

- For Microsoft Visual Studio 2008,
 - Open the project settings: Tools→Options→Project and Solutions → VC++ Directories.
- For Microsoft Visual Studio 2010,
 - Load an existing C++ application by using File→Open→Project/Solution or create a new C++ application using File→New→Project.
 - Open the project settings: Project→Properties→VC++ Directories.
- Added \$(PCSDK_DIR)/include to the include path. Add \$(PCSDK_DIR)/sample/common/include if you need to use the sample utility classes.
- Add \$(PCSDK_DIR)/lib/\$ (Platform) the library path. Add \$(PCSDK_DIR)/sample/common/lib/\$ (PlatformName)/\$(PlatformToolset) if you need to use any sample utility classes.
- Add the SDK stub library libpxc.lib (for the Release build) or libpxc_d.lib (for the Debug build) to Additional Dependencies in Linker→Input. If you need to use any sample utility libraries, additionally add libpxcutils.lib (for the Release build) or libpxcutils_d.lib (for the Debug build).
- Go to the C/C++→Code Optimization tab and change the Runtime Library setting to be Multi-Threaded Debug (/MTd), or Multi-threaded (/MT), according to your project Debug or Release mode. Note that if any of the compiler settings do not

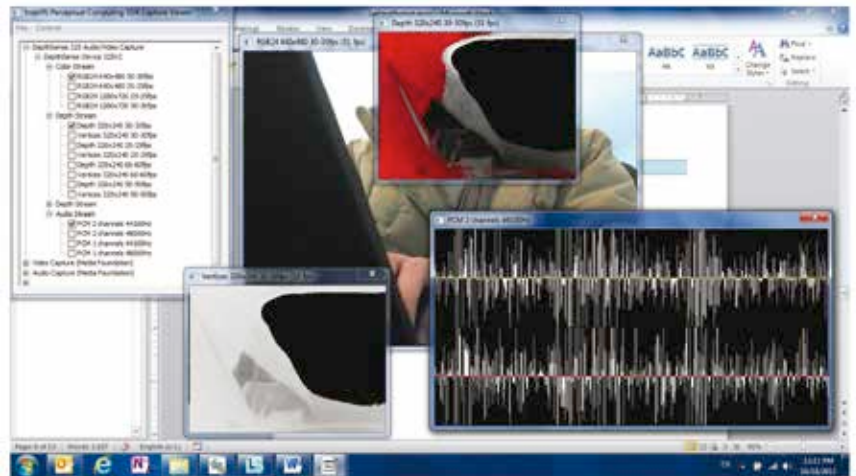


Figure 3: Camera Testing for Color, Depth and Audio

