

The need is back

EA debuts a teaser for the latest NFS game, a reboot of the Underground series. Watch it here: <http://dgit.in/1FFqCMD>

**MAD
MAX**

Mad max on Mushrooms

A video mashup of Mad Max:Fury Road with Mario Kart is making the rounds on the internet: <http://dgit.in/1SrAu1W>

DO



Tail rotor assembly



Attaching the tail rotor to the frame



Soldering the tail motor connector



Don't mess up the specified polarity

housing, and screw the entire housing onto the tail rotor shaft. Make sure you pass the tail motor wire through the shaft beforehand. This is where you'll need a soldering iron to solder the tail motor male connector to the wiring. Stick to the polarity specified by the manufacturer.

(4) Attach servo-mechanisms to the helicopter frame. Connect the



The servo mechanism on the helicopter frame

servo pushrods to the designated control points on the rotor head. The number of servos, their orientation and mounting points, and where they connect to the rotor head depends upon your specific model. Consult the schematics for correct assembly.

(5) Add main rotor blades, the skid landing gear, and the main motor. The orientation of all these parts will be more or less similar across all manufacturers.



Attaching the main rotor blades




Add the main motor with the rest of the body

(6) This would be a good time to add the brains of the helicopter – the receiver/control unit. It's best secured onto the chassis using double sided tape. Extra care must be taken to ensure that the unit is secured tightly onto the frame in the proper orientation and position recommended by the manufacturer. That's because the unit also houses a sensitive gyroscope responsible for keeping the helicopter airborne. Getting this wrong will render the bird uncontrollable, especially in the case of complicated



The receiver/control unit

collective pitch helicopters. Certain units are meant to be oriented horizontally, whereas the one in Walkera 4#3B works as intended only when fixed vertically to the frame.

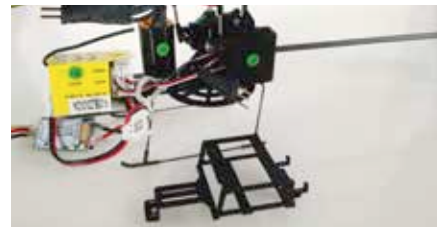

Place the battery tray carefully in position

(7) The battery tray is usually located at the bottom to obviously house the battery pack and also to tighten up the centre of gravity.



Assembling all the parts together

(8) Connect the main motor and tail motor leads with respective Electronic Speed Controllers (ESC), which in turn are hooked up to the receiver/control unit. Do the same for the battery connector. The exact nature of the connections will be specified by the manufacturer.



The completed RC helicopter

(9) Install the canopy. Throw in a battery, pair up the transmitter, and you're ready to fly. Congratulations, you're a bonafide aeromodeller now. You may look down at toy RC peasants in disdain if you please. 