


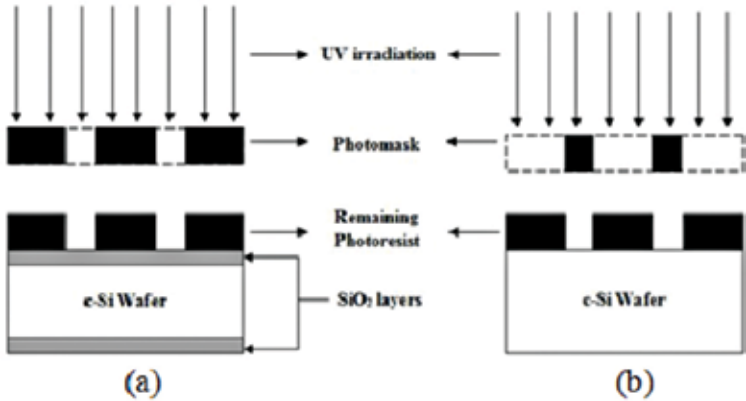

SPR process- quite an important process

which they are compared. Everything from device sizing to ports and nodes get compared. If they are found to be the same, LVS would then pass them and the designer can continue.

With the LVS tool, transistor fingers are considered as the same as an extra-wide transistor. This means that four transistors (each 1 μm wide) that are arranged in parallel, a four finger 1 μm transistor and even a 4 μm transistor are all considered as the same. The functionality of the .lib files would be procured from SPICE models which would then be added to the .lib file as an attribute. **d**