


the TWRP screen. You can continue with or without modifications. Next, click on install and click on SuperSU or Magisk and swipe to confirm flash. Once the phone reboots, congratulations, your phone has been rooted.

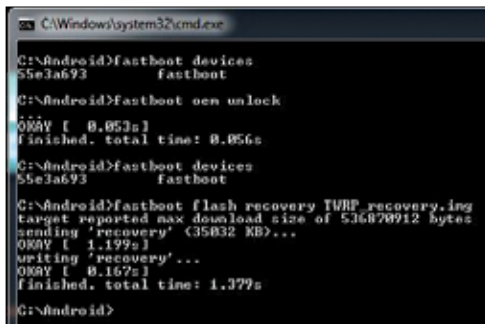

```

C:\Windows\system32\cmd.exe
C:\Android>fastboot devices
55e3a693      fastboot
C:\Android>fastboot oem unlock
OKAY [ 0.053s]
Finished. total time: 0.056s
C:\Android>fastboot devices
55e3a693      fastboot
C:\Android>fastboot flash recovery TWRP_recovery.img
target reported max download size of 536870912 bytes
sending 'recovery' (35032 KB)...
OKAY [ 1.179s]
writing 'recovery'...
OKAY [ 0.167s]
Finished. total time: 1.379s
C:\Android>
  
```

The flashing bit

Getting the tools

Download Java JDK (<https://dgit.in/~java~jdk>), Cygwin and dsixda's Android Kitchen or ASSAYED kitchen. You can find them both at <http://yagyagaire.blogspot.in/> under ROM and utilities. Cygwin is a Linux command prompt or Linux based command line interface for Windows. You will also need the stock ROM of your phone. Google "<Phone_model_name> ROM" and you should find the files you need. Just ensure that the zip files you download contain the 'system' folder. If not, hunt around till you find the zip file containing this folder. If you still can't find the right zip file, fret not, there is another method. You will also need

- Apktool to be able to modify and edit apps. Extract this file using the native file extractor program. There should be no spaces in folder name.
- Fastboot to flash the kernel to your device. Extract this file using the extractor program.



Let's get all the ingredients in place before we can start cooking