


the reservoir because if air goes into the pump, it will get damaged. As the fluid flows into the loop and almost empties up, switch off the PSU. Fill the reservoir again and repeat the process. You need to continue this until the level of the reservoir remains constant. This means that there's enough fluid for the loop. However, it's always recommended to add some extra liquid since eventually some of it evaporates.

Now, it's the moment of truth. If you've taken extra caution in every step and everything goes well, the pump will continue pushing the coolant across the loop without any leakages. But in case there's a leakage, turn off the pump right away. The paper towels that you had placed over your components must have already soaked most of the fluid. If there's still some

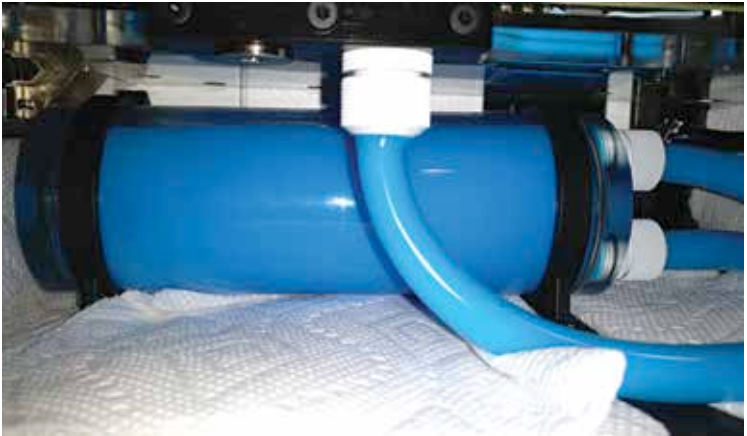

Credit: Overclocker.net user Tomahok2

Use paper towels or any absorbent material during a leak test

liquid left, then wipe them dry. Remove those components and use alcohol based cleaning agents to wipe off the affected areas. If there's some residue from the coolant then use a soft toothbrush to get rid of it. Blow dry the component and leave it to dry for a day. Only then should you connect it back to your system.

It is advisable to keep the pump running continuously for a day to be absolutely sure about leakage. If you're in a hurry then leave it running for half a day. This makes sure that the fluid has been flowing constantly throughout the loop. If there are any points or fittings where the connection is loose or compromised, the leakage will start appearing after a few hours of operation. In the initial run of the pump, the fluid will start forming bub-