


valve at the bottom of the reservoir might just ruin the look you're trying to achieve with your system. Hence, keeping all of these things in mind, you should consider whether you want a drain valve in your reservoir. With that out of the way, let's finally get into flushing the fluid from the system.

Switch off your PC and remove the cables from all the components except the pump. We'll assume that you went with a reservoir with a drain valve for this process. Keep the valve closed for now and keep the other end of the tube pointing into a bucket. Connect the PSU's 24-pin motherboard power connector to a jumper that is usually provided in a custom cooling kit. Otherwise, you can use a paperclip to jumpstart the pump using the connector by referring to the pins shown in the image. One end of the paperclip needs to go into the fourth pin from the right on the top row

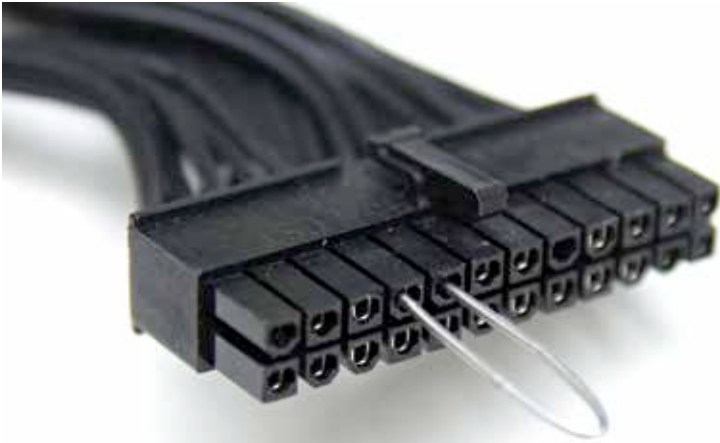

Jumpstart your pump when you're cleaning your system

while the cable connector is facing towards you. The other end should go into the adjoining fifth pin in the same row. This will allow you to start the pump without connecting the other components. However, you will need to connect the pump's power using the appropriate connector from the PSU which is usually Molex or SATA power. It won't work if you connect the pump to the motherboard.

The basic idea of cleaning the entire custom loop is to drain the fluid while adding distilled water in the loop to completely drain the coolant.