


that are lingering. The majority of digital audio workstations include tools called silence detection that may automatically find silent patches in audio and remove them. If the detection is very aggressive, then you run the risk of accidentally removing some peaceful sections of the track.

You can never fully erase audio using the non-destructive editing that is available in modern DAWs. The only way to do so is to either delete the source files or convert sections to new audio files. This indicates that you are able to return areas to their initial conditions, even after trimming and resizing them to a different proportion.

When muting or cutting is simply too forceful for your edit and you need a more nuanced approach, fades and crossfades are excellent tools to have at your disposal. The transitions between two sections of edited audio can be made much more seamless with the use of crossfades.

Noise reduction

Getting rid of sounds that aren't natural to your environment should be at the top of your to-do list at all times. Otherwise, they will just serve to obstruct, steal bandwidth from the signal, and lower the overall quality of the experience.

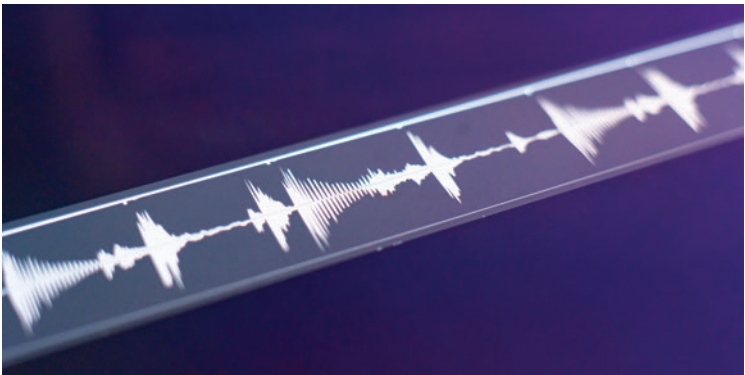

The 50 or 60 Hz hum, which is typically brought on by an improperly routed or grounded power source, is the most prevalent source of the problem. Wind and background noise are two other common offenders that should be avoided or minimised as much as possible during the recording process. Windscreens, directional microphones, and proper microphone placement are some of the ways that this can be accomplished.