


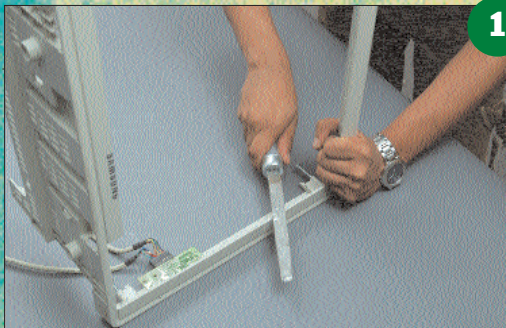


1

Filing the CRT bezel to fit the larger LCD—guaranteed to give you muscles



2

Don't bother being neat on the insides, it's the outsides that matter. Viva la soldering iron

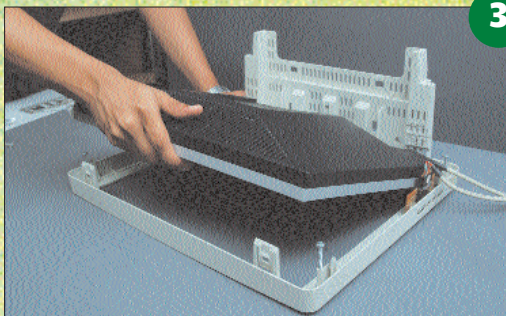


3

Keep placing the LCD back in to make sure you don't file away too much



4

Use the CRT's earthing to hold the LCD in place

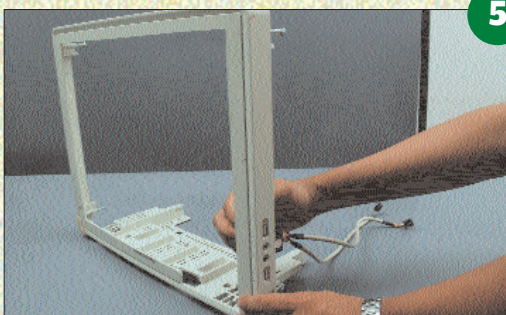


5

We just stuck the front panel USB and audio in place with a lot of super glue—it's still holding out




6

Cut away all the extra bits of the metal circuit board holder—thank God for soft metals

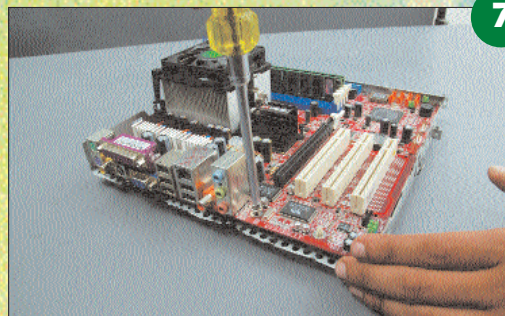

7

After you make sure that there is enough insulation, attach the motherboard

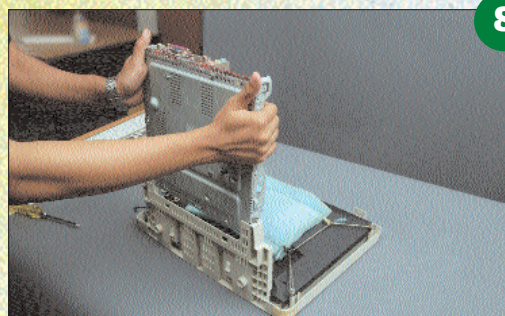

8

Connect the motherboard holder back to the front panel—don't leave it lying around or you'll step on it



9

Ahh! Who needs a drill when you have a soldering iron?



10

That's the only place we could think of for the DVD drive