

Disposable pen drive!

Art Lebedev's Flashkus have designed a new form of pen drives which are made of card boards and are disposable read more on <http://bit.ly/dQuZ7L>

More Xoom news

Motorola Xoom would be available for \$799 for 3G version with a free upgrade to 4G

Phone locked, optical drive troubles, slow start ups and dual booting

Digit Q&A answers these queries and more...

Unlocking phone

My Sony Ericsson k750i is locked, so I cannot use it. It asks for a lock code and I don't know it. I got this cell phone from my cousin brother, and he has also forgotten the password. Please help.

Samuel Tamer

What you need is a software called "_phonelockcode.zip" that will tell you the password to unlock the phone lock of a Sony Ericsson K750i / W800i. Since this can also be used by people who have stolen phones, we're just pointing you in the general direction, and not giving you full instructions on how to use it. There are many other similar software, such as XS++, that will help you do the same thing, but you're going to have to do your own web searching for them.

Slow boot

I am facing a very big problem with my PC. It takes about 15 minutes to finish booting, another 10 minutes to get to the welcome screen. I have removed all extra applications – even my media player – but to no avail. My PC configuration is as follows:

Intel Pentium 4 (3.2 ghz)
Intel motherboard
1 GB DDR2
80 GB SATA HDD

Manoj

Get into your BIOS (press [Del], [F1], etc., applicable to your BIOS), and check that the 'Quick Power On Self Test' is enabled. Also, in case your motherboard manufacturer's logo displays instead of the POST screen, make sure that you disable this so that you can see what's actually taking so long. If the BIOS is just sitting there doing nothing, you may want to reset to defaults, or use the Clear CMOS jumper. We'd be able to help you a lot more if you gave us the exact model

numbers in your configuration, which is why we ask all our reader to send those in. If all that fails, see if you can borrow a power supply from someone and ensure that your power supply is functioning properly..

Which Win 7 is for me?

What is basic difference in Windows 7 versions – ultimate, home basic, home premium and professional in details. Which one is suitable for me? I am a student of B Tech (CS) branch.

Sandeep Kumar Maurya

To be honest, just knowing that you're a BTech student isn't really enough information for us to suggest a version of Windows 7. Although all the software you need will run on Windows

the ability to run things in Windows XP mode.

Head to <http://bit.ly/h4RHTP> and <http://bit.ly/egTGC0> for the detailed comparison that you want.

Drive can't read CDs


I have an Acer laptop (model no aspire 4720Z) running Windows XP SP2, with 1GB RAM, 160GB hard drive. My DVD drive is able to open and browse almost all DVDs, but refuses to read most CDs.

Alok Rao

You either have a software or hardware problem. To make sure it's not a software problem, go to <http://bit.ly/i2qtN4> and download and run Microsoft's Fixit tool. If this does not solve the problem, go to Start > Run > regedit > [Enter], and when the Registry Editor opens up, search for "PxHelp20" or "PxHelp20.sys". If you find mentions of this folder or file, just rename it to something like "_PxHelp20" and "_PxHelp20.sys", and see if your drive can read CDs. If none of this works, get the latest firmware for your drive, and update it. If even that doesn't fix it, then you probably are out of luck and will need a new optical drive.

How do I dual boot?

I want to install Ubuntu10.10 on my computer. I have Windows XP Professional. I have heard that people face problems with dual boot of Windows and Linux. Also what kind of drivers do I need to install? My XP discs are NTFS, can I install Linux on that? My computer specifications are: ASUS M2N MXSE Plus motherboard, AMD

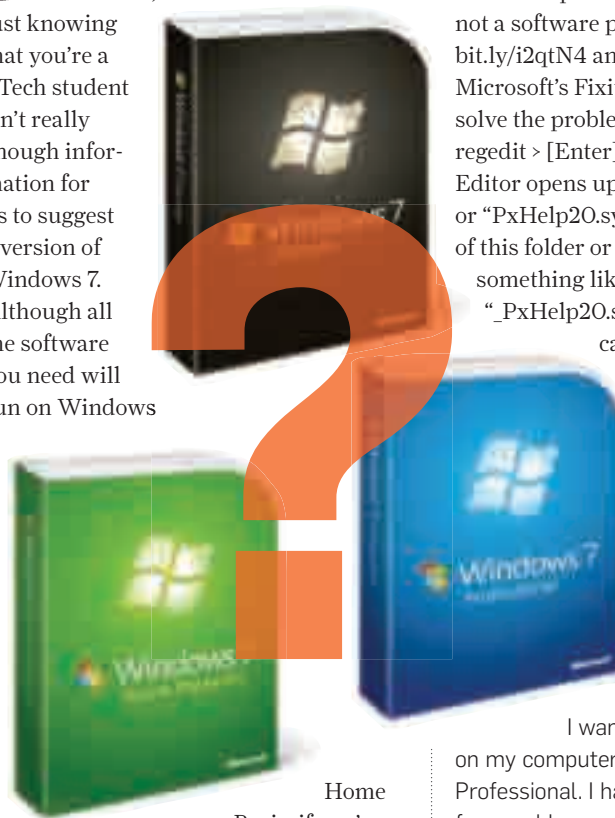

Home Basic, if you're looking to run applications that may be built for Windows XP or earlier, you may need Windows 7 Professional. The major advantage Professional has over Home Basic and home Premium is