



Intex Aqua SX and Aqua Star

Two new dual SIM phones from Intex labeled Aqua SX and Aqua Star with Android 2.3 Gingerbread popped online at the price of ₹4990 and 3990 respectively. <http://dgit.in/14giujI>



XOLO B700 available

Budget Android phone XOLO B700 is now available online in India for ₹8999. <http://dgit.in/11v2iKB>

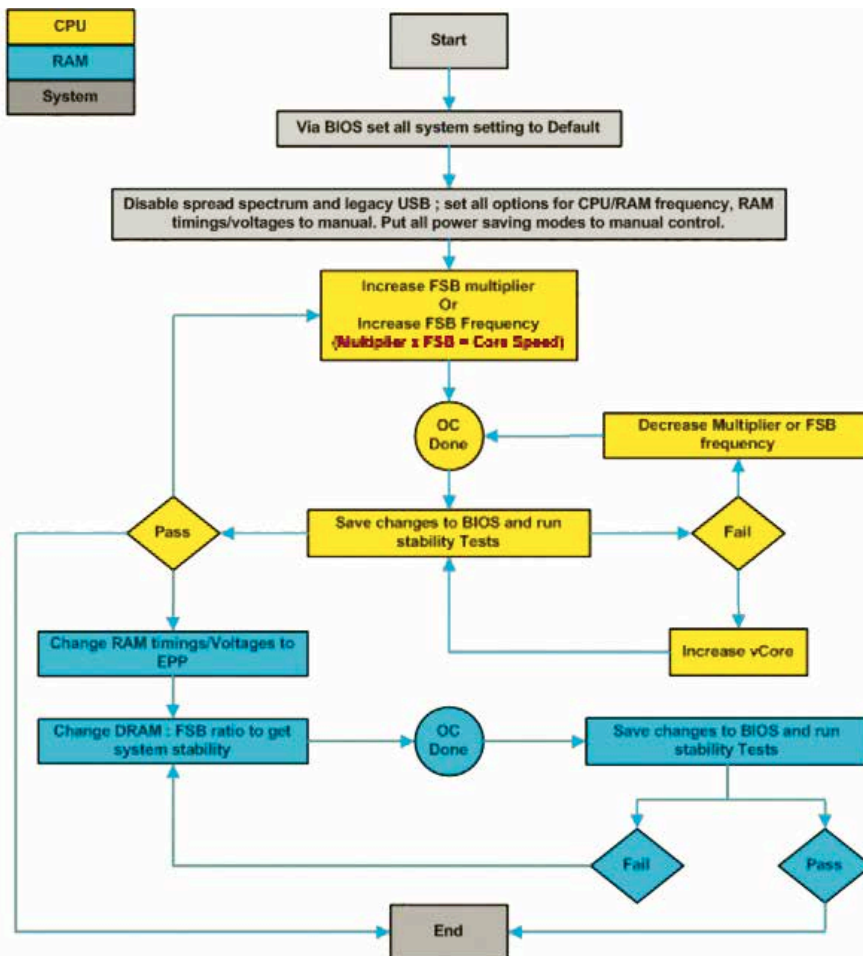


Image credit: asingh: www.thinkdigit.com/forum/

A chart for reference during Overclocking

RAM settings Menu in the BIOS and set values as shown on the RAM specification documentation (but don't try to increase the voltage). It is important to do so in order to check whether the RAM is alright. Save and Exit your settings and if the system boots up properly, you should run at least 3 passes of *Memtest86+*. If everything seems fine then you can start with overclocking your CPU.

Start by increasing your CPU multiplier or ratio in small steps. You should only add 200-400 MHz at a time and not make increments above 400MHz when you are gunning for a 4GHz overclock, and not more than small increments of 100 MHz after that. Once done, check all the changed settings, note them down, then hit Save and Exit. Once you boot in properly, run some tests and check the stability. If somehow your PC displays a BSOD (Blue Screen Of Death) don't worry as you can clear your CMOS and try again

with different settings. Overclocking gets more complex when you have a locked CPU and you need to change the BCLK/FSB. The thing to check here is that the speed of your RAM is affected by BCLK which makes things problematic and this is why enthusiasts as well as good overclockers insist on buying faster RAM with 1600+ MHz speeds. You can set a lower than rated speed for the RAM to ensure stability while you overclock the CPU. Often, between a range of 100-200 BCLK or less is easily achievable, so note down and shift the values you can use to eventually run your RAM to 1400, 1600, or much higher speed if the RAM has been rated for that. You will sometimes also need to change the command rate for the RAM to work at rated speeds. Once done, always check RAM stability by running *Memtest86+*.

Now for the CPU, increase the Vcore by one or two increments at a time (the

minimum that your motherboard supports, usually 0.05V). If you face failure, you can change Vcore again to a certain extent or increase VTT by some amount. Test again. If it fails, change Vcore again or increase VTT by the same amount.

The motherboards BIOS usually has the Vcore set to Auto by default. You can usually set the voltage to "manual" or "offset" where manual shows you the complete voltage reading and offset just shows the amount above or below the stock voltage the CPU is rated at.

If and when you reach a high overclock for your CPU say greater than or equal to 4.0 GHz, chances are that you may not be able to increase CPU multiplier/ratio and get better results. To counter this, you will now have to start increasing voltage step by step and only then you may see some difference in performance or clock speed but eventually, the CPU will need more voltage to be stable. Note that you may need to apply more voltage to get a small increase in CPU clock. Be very wary when increasing voltage as raising the voltage haphazardly can and will result in a fried CPU or worse. The increments need to be tiny, in the order of 0.05V or less, and you need to stress test after every increment If you are satisfied with the current speeds

Tip: Take your time with overclocking, understand and note down each and every change, don't jump too high very quickly and always run stability tests after each significant change in settings.

or your cooling can't take any more, then stop right there and check for stability and tweak the settings so that you can run your computer at the overclocked speed for a long time without running into trouble. Do note that some motherboards come bundled with software that will certainly ease your overclocking process. The same warnings apply though.

For higher overclocks pertaining to benchmarking you may need to disable Cool N Quiet (for AMD CPU's), C States and EIST/Speedstep to achieve higher clocks. We wish you stable and good clock speeds with minimum loss of limbs and/or components in the process. **[1]**