

Installing A CPU On An Intel 915/925 Chipset Motherboard



The upgradation steps mentioned above are for older-generation or current-generation CPUs. With the new PCI-Express architecture, this is going to change. If you are upgrading to PCIe, ‘upgrading’ is a misnomer, since it will be a platform change.

In such a case, if you are upgrading to an AMD CPU (say to an AMD 64 FX53), the steps mentioned above will be applicable. However, if you are upgrading to a platform based on the Intel 915/925 based board and CPU, follow the instructions below to install the CPU on that kind of board.

The slot on the board is different and so is the CPU that you are about to install. Before installing, let’s take a good look at the socket and the processor.

1. Take the processor and apply some thermal paste on top of it. Place it in the socket so that the notch on either side of the processor coincides with the small jaws on either side on the socket, and fits snugly. Then, lower the metallic retention mechanism on the top of the processor. Lower the pin and tuck

Install the processor in the open socket

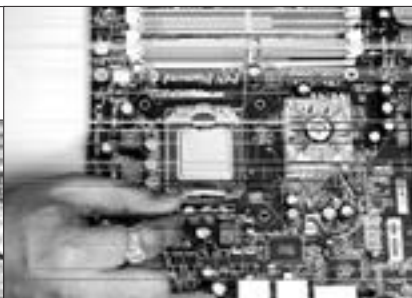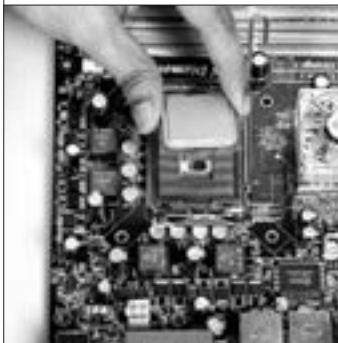

Pull the retention mechanism on top of the processor