


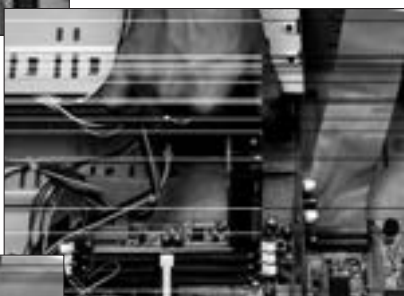

Connect the IDE cable to the motherboard



Insert the hard drive in an empty bay



Screw the hard drive to the bay



Connect the other end of the cable to the hard drive



Finally connect the power cable to the hard drive