


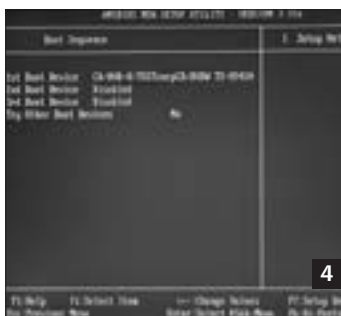

Change the boot sequence in the BIOS such that the computer boots off the CD/DVD drive. (Sequence of screens above is 1, 2, 3 and 4.)

remind you of the old Windows NT installation. If you have a SATA hard drive, you may need to install the RAID drivers for the chipset before you can go on to installing Windows XP. For this, press [F6] when you are prompted to do so, put in the flop-

Initial Windows XP install screens

