


In CDMA networks, there is no need for such a complex procedure. All calls are handled within the same frequency band, so when you approach a new base station, your call is already being handled by two stations. As you leave the coverage of the older base station, you are already being handled by the new base station. This is called a 'soft' hand-off. It means no dropped calls in a CDMA network.

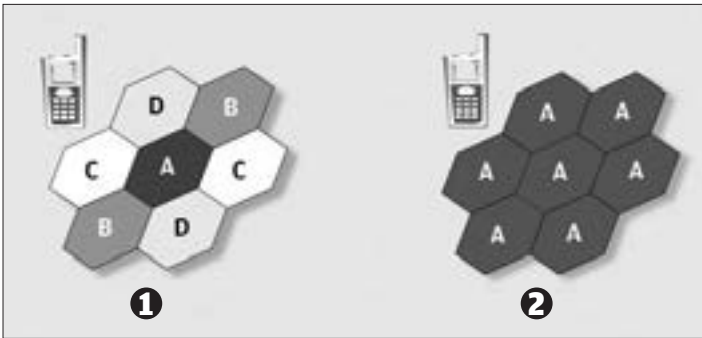

- (1) Frequency reuse in TDMA based networks.
(2) All cells in a CDMA network work on the same frequency