


work driver, use only the latest drivers from the adapter manufacturer's Web site.

If you are connecting two computers together without using a hub or switch, make sure you've used a crossover cable. Crossover cables can be easily confused with regular cables.

Let's Play Ping-Pong

If you've followed the above steps and still have no luck, check if the network card can ping itself. "Ping" is a diagnostic utility that helps you to find out if

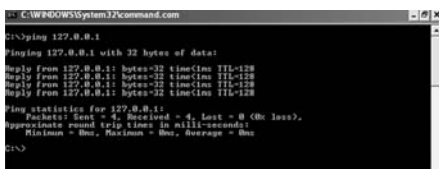

```
C:\WINDOWS\system32\command.com
C:\>ping 127.0.0.1

Pinging 127.0.0.1 with 32 bytes of data:

Reply from 127.0.0.1: bytes=32 time=0ms TTL=128
Reply from 127.0.0.1: bytes=32 time=0ms TTL=128
Reply from 127.0.0.1: bytes=32 time=0ms TTL=128
Reply from 127.0.0.1: bytes=32 time=0ms TTL=128

Ping statistics for 127.0.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\>
```

Pinging your LAN card

the network connection is working properly, and the utility is present in all versions of the Windows and Linux operating systems. In Windows, you can ping your network card by going to Start > Run, typing in "command" and pressing [Enter]. At the command prompt, type in "ping 127.0.0.1" or "ping localhost". You should see a set of replies from your network card. If you receive an error message, or if transmission fails, then the network card is not physically installed in the computer correctly, or is faulty. If the network card is faulty, get it replaced instead of trying to get it repaired. If you buy a new card, opt for a gigabit Ethernet card instead of the older 10/100 cards.

If your card is properly installed and pings itself, but still cannot see other computers on the network. It's time to verify that the protocols used are correct and installed on all the computers on the network. Most computers today use TCP/IP as the default protocol, but some network administrators prefer IPX/SPX and NetBEUI.

When specifying the IP values, it is important to make sure that the Subnet Mask must be the same on all the systems connected to the network, and that no two systems have the same IP