


4.3.1 Keeping It Simple

Right now, let's start with the flat roof. First, select your entire house and make a component out of it. This way, we can trace the outline of its roof without those lines becoming part of the house. Use the Line tool to trace the roof; once you're done, you'll see that a surface has formed. You can still see the edges of the underlying walls, though, so use the Push tool to increase the thickness slightly. Now use the Offset tool to create the outline for the parapet, and use the Push tool to extrude it—just like you did for your first floor plan.



Of course, flat roofs are no fun at all. Any roof that isn't flat is called a *pitched* roof, and pitched roofs require *eaves*—overhangs that jut out above your house.

4.3.2 Eaves And Gables

To create the overhang, we're going to trace our roof like before, and then use the offset tool. This'll look like your floor plan with walls again, but in this case, we don't want the walls. Double-click on the inner face to select it and all the edges attached to it, and hit [Delete]. This should leave you with a single face that overhangs your house. Now use the Push tool to raise it a bit.

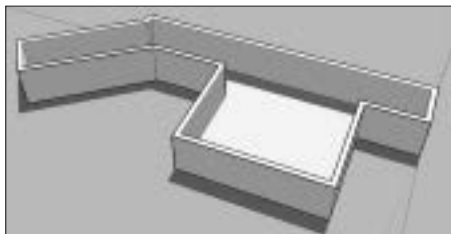

This is the house we'll be building a roof for

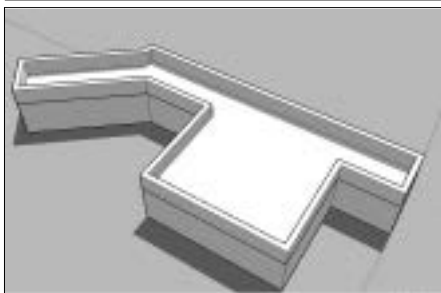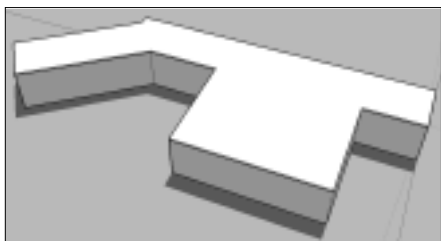

Trace the outline of your roof, then create the parapet using the Offset tool