



4.1.2 Getting With The Plan

Let's look at this logically—every good floor plan needs walls, so this is what we first set out to do. Use the line tool to draw a basic floor plan in the top view—it need not be like ours, and especially so, because we're not using it for anything serious.

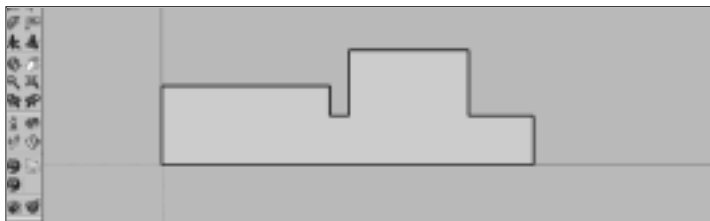

Starting with a basic floor plan

Now go back to the normal 3D view—Camera > Standard Views > Iso, and choose Camera > Perspective. To turn this floor plan into 3D, our approach is simple—use the Push tool ([P]) to extrude the plan upwards, and then delete the top plane using the Select tool [Space] and hitting [Delete] . But something's not right...

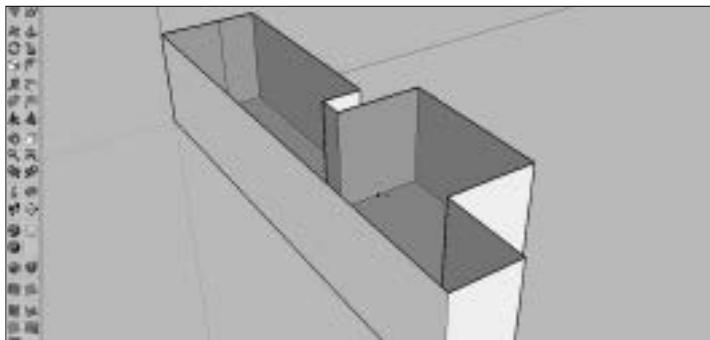

A house with wafer-thin walls?

Real walls have a thickness associated with them, so, this approach, although ultra-convenient, is dreadfully wrong. Use undo ([Ctrl] + [Z]) to get back to the plan in its 2D form, and get back to the top view.