


Adding thickness to walls is simple—use the Offset tool ([F]) to offset the edges of your plan, only remember that you should take the offset *outside* your plan. When you take measurements of your house, you’re measuring the inside—creating the offset outside ensures that your measurements remain intact. Now go back to the Perspective view, and use the Push tool to extrude the area between the two offset edges. *Voila! A wall!*

The current result is much better, but we still need to build interior walls to mark off rooms. Your instincts are most likely going to tell you to start drawing rectangles on walls and start

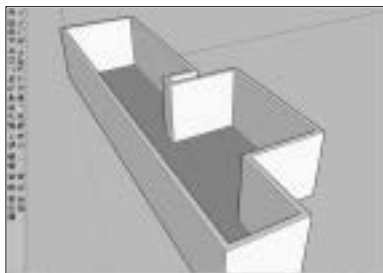

Much better. Now, on to inner walls...

extruding them using Push. However, the second you complete the rectangle, a surface fills up the top of your model, preventing further access to the inside. We’re not sure if this is a bug or is supposed to happen, but it’s mightily irritating—and we understand that. To get around it,

simply delete this plane—your rectangle will still be there, and you can start extruding it.

This may work if you have only one or two interior walls to build, or if you have infinite patience, but there’s a much better approach. Go back to your plan in 2D in the top view again—we’ll start drawing our walls here itself, using the Line tool ([L]). Use the Tape Measure to create guides, so you know where to start drawing. In the screenshot, we’ve measured 2 m from the wall on the left. Use [Ctrl] to toggle whether the Tape creates a guide (a “+” appears next to the cursor). Now, start drawing the wall along



This is what happens when you try to build a wall the wrong way