


this guide. Once you've completed it, delete the unnecessary edge between the exterior wall and this one using the Eraser tool ([E]).

Repeat this for all the interior walls you want to create. Don't worry about leaving blank spaces for doorways and windows right now—we'll take care of those later. Since this is the final approach we'll be taking, it's better to start your plan from scratch, with accurate measurements and everything.


Now that the house has rooms, it's time to start adding fixtures, say doors.

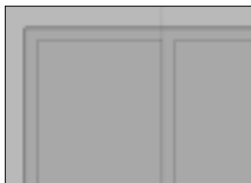

Drawing the wall, and then removing the edge

4.1.3 Openings


There are two approaches you can take to creating doors and windows for your house—either punch them in yourself, or use preset components in their place. First, however, you need to

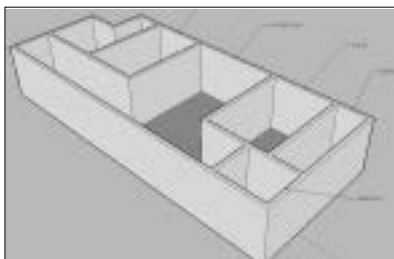

Your rooms are ready, sir

create guide points for all the doors. The typical doorway is about a metre wide, and a couple high.

We'll start with punching in our own doors. The procedure here is quite simple, now that you've got those guides. For each door, draw a rectangle that's 2 m x 1 m. Use

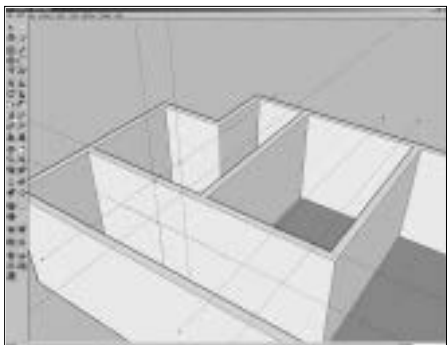

The guides for the doors—this can get a bit messy, and if you're using pre-made components, you only need the guides for width