


the Push tool to push it backwards till it meets the other side of the wall—you'll know you've done it right when you see a hole where your rectangle once was. Repeat this for all your doorways.

This approach, while time-consuming, is better if you want to create walkthroughs for your design (more on walkthroughs in Chapter 7). The second approach is to use a pre-constructed door component. Go to **Window > Components** and in the drop-down, choose **Architecture**. The second door (**Door3-0x6-8RHRev**) is exactly 2 m x 1 m, so you don't need to make any adjustments to your guides. If it weren't, however, you could easily resize it proportionately using the Tape Measure.



Oh my God! It's full of doors!

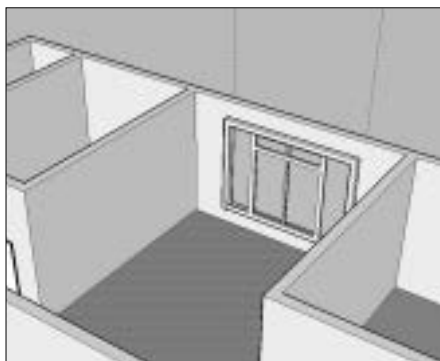

With a spanking new window, this house's taking shape rather nicely

Click on the door you want, and in the model, use the cursor to align the bottom-left corner of the door to the spot where you want it—it ought to snap to the bottom edge of the wall and the guides you created. To copy this door, use the Move tool ([ M ])—hit ([ Ctrl ]) and click on a reference point on the door (corners work best) and position the copied door where you need it. If you're up to it, you could do both—punch holes for doors, *and* use the component.

It's the same with windows, except you can't get away by just placing the window—you'll have to create holes in your wall.