



of keying, including phase-shift keying, frequency shift keying and amplitude shift keying. Bluetooth, which is used by the modern world, uses phase shift keying.

Transmission at a lower frequency results in large losses of energy. Therefore, many signals are transformed into a higher frequency in order to transmit. The signal is superimposed on a higher frequency wave known as the carrier wave before transmission.

The simplest type of modulation technique for digital signals is continuous wave modulation. When the radio operator presses the key the waves will be transmitted and when he leaves the key it stops. This is the basis of Morse code.

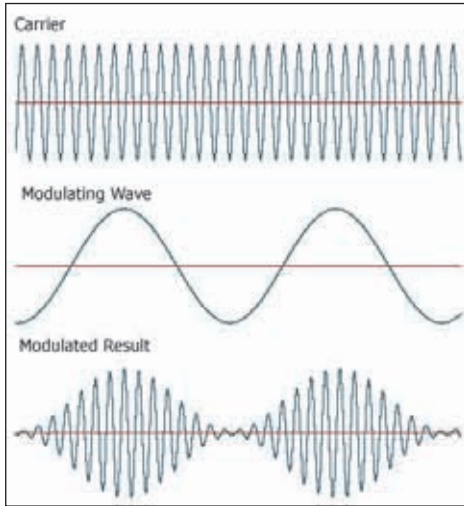

An amplitude modulated signal

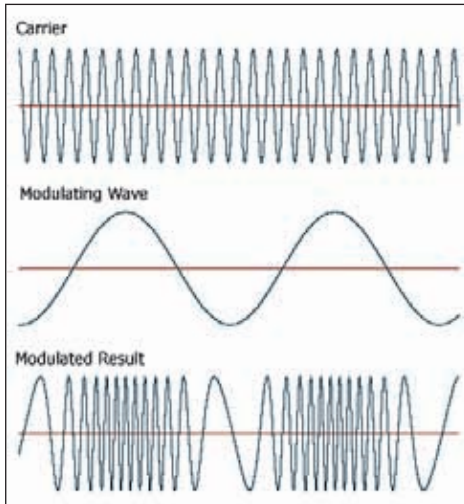

A frequency modulated signal