


Remember to perform flashing on a fully charged battery only! And stay clear from flashing SL3(Simlock3) phones with custom firmware for now atleast, google to figure out what your phone is. There is a very low rate of success. Now, follow these steps -

1. You will need your original firmware files first. You can download that from Navifirm (<http://digit.in/L9qPvy>). Once you install Navifirm, you will see list of Nokia devices.
2. Check RM type, software version and product code of your firmware in your phone (you can do that by pressing `*#0000#`; keep the screen open). Scroll down in Navifirm and select your device model with corresponding RM type. In our case, it is Nokia 701 (RM-774).
3. Next is the software release. Select the one which corresponds to your phone.
4. Now you will get list of variants available for your phone. Search for the one which matches your product code. The final screen should look somewhat like this.
5. The files you need will be of this format core, rofs2, rofs3, uda, dcp, vpl, bin(signature). Download these files anywhere on your computer. Size will be around 400mb.
6. Now you need Nokia Cooker to calibrate the core file. You can download that from here. <http://digit.in/LR3jV7>.
7. Download, and open Nokia Cooker.exe in the zip file.
8. Now select Open Firmware.
9. Browse to the place where you have downloaded your firmware files and select .core file.
10. It will take a while before you can access all the icons, have patience. You need to select 'Unlock ROFS' there.
11. Once you do that, a dialogue box will open. There will be three parameters



Select your firmware file

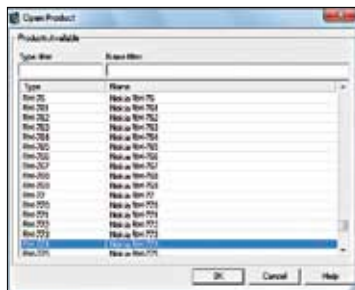

Select your RM-number