


has two major problems in real time systems:

If the code was in a critical region accessing some hardware, it can crash the hardware as we mentioned earlier.


Even if it is safe to stop the processor, some tasks may have hard real time requirements which can fail if you stop the processor.

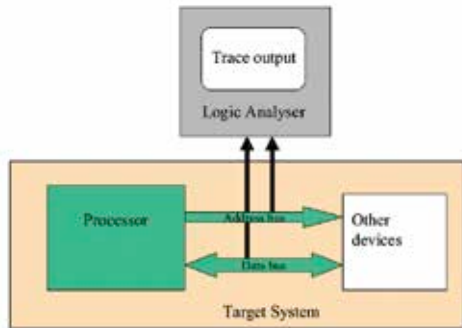

MPLAB ICD3

This is where the tracing comes in, real-time trace captures a trace (a series of) instructions that are executed by the processor in a buffer which can be analysed later. In addition to the instructions executed the data that is used by those instructions is also stored. It is also possible to select a trigger condition for a trace to begin – execution of a particular instruction, writing of a particular value, writing to a particular location in RAM et al. You can also construct complex triggering conditions by mixing together various other condition.

To procure a real time trace of the system on a trigger, one needs a logic analyser. The logic analyser is connected to the processors address and

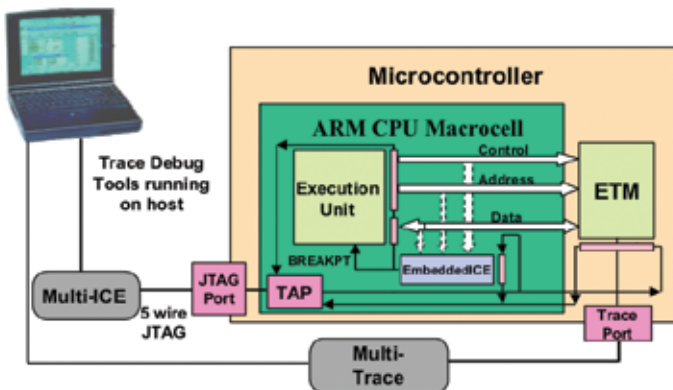

MPLAB ICD3