




STEP 09 Remember that the fold will be on the outside of the printed section. Basically, the printed elements will be visible on the outside, so don't fold inwards.



STEP 10 Folding a cardboard sheet can make it tear at times, so you need to score or gouge through the fold lines for a smooth fold. If you're unaware of scoring or gouging, basically you need to use a blunt object like the edge of a scissor and slice it on the fold line to create a crevice, that will let it easily fold and won't result in tearing. Again, use a steel ruler to make sure you're in line.



STEP 14 Once assembled, Start gluing the open flaps and other layers to one another.

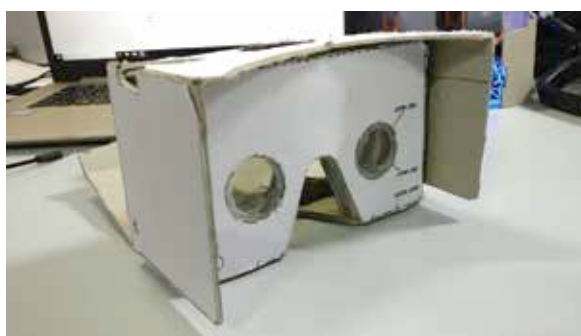

STEP 15 Insert the lenses on the outer layer with the eye-cutout. If the lens isn't firm in the eye-cavity, glue the edges to offer a firm placement.



STEP 11 After you've folded the cardboard accordingly, you'll see the headset taking its shape.

STEP 12 Now it's time to put everything together. The templates will have the layer orientation written, along with the order. So there is an outer layer, a middle layer and an inner layer.

STEP 13 Start assembling the outer layer first, starting with number 1 and then go all the way towards the inner layer.



STEP 16 Insert a rubber band to add some grip for the smartphone. Also, stick the velcro surfaces on the top to rest the smartphone safely in the cavity.



STEP 17 You can now decorate the cardboard using markers, adhesive tapes and paint to make it look cool