

official website <https://download.pixelexperience.org>. In my case, the device is Redmi Note 4 (Mido); download and save the zip file in the phone memory.

2. In a Web browser, navigate to the Android SDK tools website <https://developer.android.com/studio/releases/platform-tools.html#download>. Under the download section you will find three links for your platform — Windows, Linux and Mac. Depending on your operating system, download the SDK, which is just around 7MB.
3. In a Web browser, navigate to <https://twrp.me/Devices/> and search for your device. Here, remember that my device is Redmi Note 4 and the name is Xiaomi Redmi Note 4(x) (mido). Go to your device by simply clicking on the link. There is a section called *Download links* that you can click on. Choose the latest TWRP image and download it.
4. Head to the *Downloads* directory and extract the platform tool's zip file downloaded in Step 1.
5. Move the TWRP image file downloaded in Step 2 inside the *Platform Tools* folder.
6. Connect your phone to a computer using a USB cable, and make sure that *USB debugging* is ON.
7. Open a command window and CD to the *Platform Tools* directory.
8. Run the following commands on the command prompt:
 - i. Run the command `adb devices`, and make sure that your device is listed (Figure 4).
 - ii. Run the command `adb bootloader`. It will take you to the bootloader.
 - iii. Now type `fastboot devices`. Your device will get listed here.
 - iv. Run the command `fastboot flash recovery twrp-image-file.img`.
 - v. Run the command `fastboot boot twrp-image-file.img`.
 - vi. Wait for a few moments and you will see the Team Win Recovery Project start on your device.

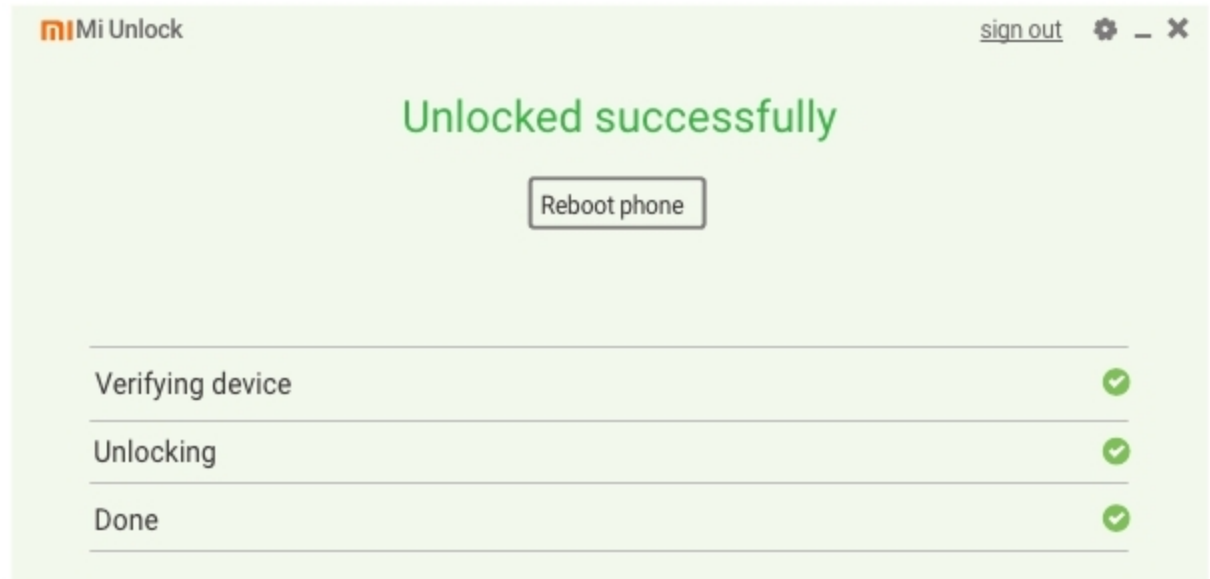


Figure 3: Unlocked successfully



Figure 4: Command `adb`

Steps to install custom ROM on Xiaomi device

Installing the Pixel Experience ROM on a device

Now you are already booted into TWRP. It is recommended that you take a backup. Press *Backup*, select the following options, and swipe right to backup.

- System
 - Data
 - Vendor
 - Recovery
 - Boot
 - System image
- i. Next, wipe the existing stock ROM from your device. To do so, go to *Wipe->Advanced wipe options*, select the following options and wipe them:
 - Dalvik
 - System
 - Data
 - Cache
 - Vendor

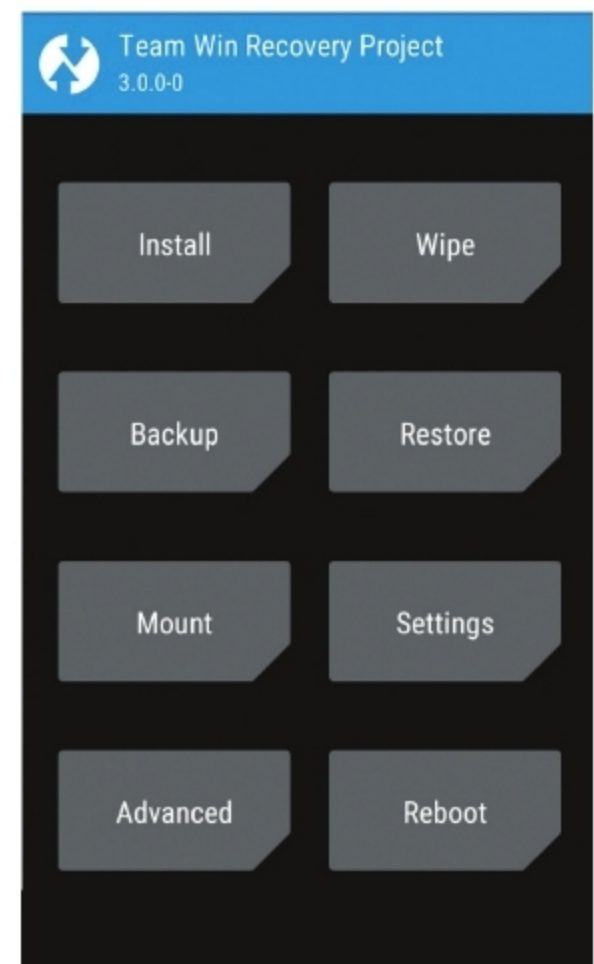


Figure 5: Team Win Recovery Project

- ii. Come back to the *Install* option and browse for the *pixel experience* zip file, select it and swipe to flash. It will take some time. Once it is completed, wipe the cache.
- iii. Press the *Reboot to start* button. Pixel Experience will get started on your device.

Congratulations, you now have successfully upgraded to Android Pie. **END** 🐧

By: Swapnil Vivek Kulkarni

The author is a software engineer at Siemens PLM Software, Pune. He is inspired by open source software, loves to explore new technologies and enjoys programming.