

Fig. 3: Raspi-config

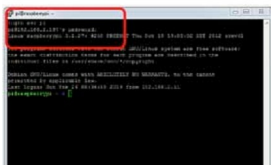


Fig. 4: Remote session



Fig. 5: Proftpd configuration



Fig. 6: Apache not properly configured for Raspberry Pi



Fig. 7: Ifconfig



Fig. 8: Host name change

to the SD card and the image name should match with the one you have downloaded.

Windows users. Use the image write program downloaded from <http://launchpad.net/win32-imager-writer> to write the image in the SD card.

Run the .exe file. You will see a window as shown in Fig. 2. Browse to locate the path of the image file. Take care that you select the right device. Otherwise, it may format your hard drive. Once the write is successful, you can immediately put the SD card in your Raspberry Pi and boot it for the first time.

First boot configurations

When you boot the Raspberry Pi for the first time, you will come across Raspi-config utility as shown in Fig. 3.

Using this utility ensure that the keyboard type, keyboard language, keyboard layout, locale and time zone are correctly selected. Enable 'ssh' also so that you can do rest of the things remotely. Even if you missed to configure for the first time, you can still do it using below command in the terminal:

```
sudo raspi-config
```

Set the root password

Once you finish configurations in the previous step, the system should reboot. Now you can access the Raspberry Pi remotely as 'ssh' is already enabled to do the remaining installations. Once the machine reboots, open an 'ssh' remote session (refer 'Remote Access to Raspberry Pi' article published in EFY June 2013 issue) and execute the command:

```
sudo passwd
```

Enter the root password of your choice. You can change the level to root by executing 'sudo su' command whenever you need the root privileges. All the installation is best carried out with root privileges, so it is better to run the command before further installations.

Install the proftpd ftp server

Proftpd server will be used at a later stage to transfer your website on Raspberry Pi. Install the proftpd server by running the following command:

```
apt-get install proftpd
```

Now select 'standalone' when prompted as shown in Fig. 5.

Install apache2 server

Now you have to install apache2 server but before that, run the below-mentioned commands to fully update your system:

```
sudo apt-get update
sudo apt-get upgrade
```

(This will take quite some time if you are doing it for the first time.)

Now install apache2 Web server using the below-mentioned command:

```
sudo apt-get install apache2
```

Apache server will run after the installation. You can, however, start/stop the server by executing the following commands:

```
service apache2 start
service apache2 stop
```

After initial installation, apache2 may report the following error as shown in Fig. 6:

Could not reliably determine the server's fully qualified domain name, using 127.0.1.1 for ServerName

This means that apache2 is not configured correctly for your Raspberry Pi. To resolve this, first identify your IP address by running the following command:

```
ifconfig
```

Note down the IP address, which is the numbers following immediately after 'inet addr:' in the first paragraph of the output (see Fig. 7).

Now edit the host name as follows: