

ies linearly with temperature. Hence you can calibrate the measured voltage to the temperature of the surroundings

it is being interfaced with. Same is the case with a pressure sensor, LVDT, etc.

You may also need to trigger a device

from a PC with a voltage signal, or you may require a dynamically changing voltage level to drive a certain

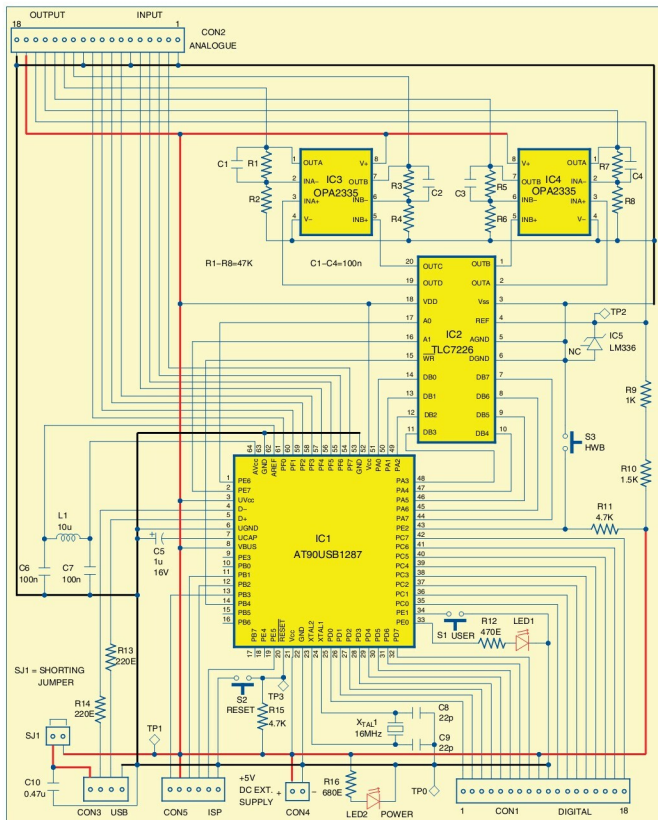


Fig. 2: Circuit of USB data acquisition system