



Fig. 5: Error message received during installation

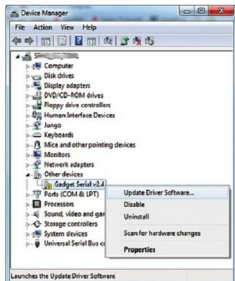


Fig. 6: Galileo appears as Gadget Serial v2.4

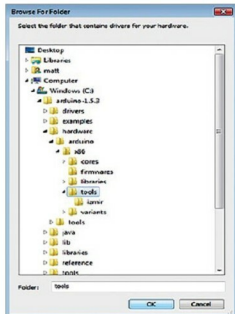


Fig. 7: Browse tools driver software location



Fig. 8: Click Next to install the driver

cludes UART on pins 0 and 1, 12C pins and SPI pins. Six digital inputs/outputs can be configured as PWM (pins 3, 5, 6 and 9-11).

Analogue interface. It has six analogue inputs (A0-A5). It also has an 8-pin power header that includes 3.3V, 5V, GND and reset pins.

Reboot button. Use this button to reboot Galileo board (including Linux). The system will boot back in around 30 seconds.

Pin 13 LED. This is the LED that we will blink during blink test program.

Arduino sketch reset. This is the reset button that will restart Arduino sketch running in Galileo.

µSD card. It has a micro-SD card slot (compatible up to 32GB micro-SD card) and has an inbuilt dedicated SD controller.

PCIe connector. It has a Full PCI Express mini-card slot with PCIe 2.0 compliant features for Wi-Fi, Bluetooth or mobile connectivity; for Wi-Fi, Intel recommends Intel Centrino N135 mini PCIe wireless module as shown in Fig. 3.

Powering up Intel Galileo

To switch on the board and upload the code, the following components will be required:

Power supply. You can use any supply but make sure that it can keep up to 3A, and output voltage must be regulated to 5V DC. Connect the supply to the 5V input connector.

USB to A/B micro cable. This is included with the board. It is used to connect Galileo board to the computer.

Software for Intel Galileo

Standard Arduino integrated development environment (IDE) does not support Intel Galileo. The supported IDE can be downloaded from communities.intel.com/docs/DOC-22226

Download the version that is compatible to your operating system (OS). The versions available are for Windows, Linux (32- and 64-bit versions) and Mac OSes.

Lab note. This project was tested on Windows 7 and Ubuntu 13.04.

Software installation for Windows

Save the unzipped file in C: drive. The unzipped file can be saved by the same name (Arduino-1.5.3) as shown in Fig. 4.

Open Arduino-1.5.3 folder and run `arduino.exe` to launch Intel Arduino IDE for Galileo.

After software/IDE installation, connect the board to the computer for which you also need to install required drivers.

Connect regulated 5V supply to Galileo and then connect Galileo to the computer via USB cable only when the LED for USB client turns



Fig. 9: Galileo COM port

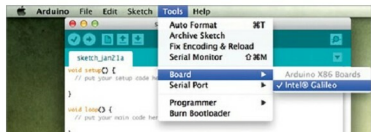


Fig. 10: Selecting Intel Galileo board on Arduino platform