



Fig. 11: Choosing COM port

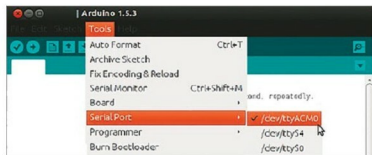


Fig. 12: Choosing ACM0 in Linux



Fig. 13: Running the application in Mac

on. As you connect the board you will receive an error message, that there was some problem in installing the driver as shown in Fig. 5.

Open Device Manager by clicking Start→Control Panel→Systems→Device Manager options. Under Other Devices you should see Gadget Serial v2.4. Update the driver from the option as shown in Fig. 6.

On the first pop-up window, click Browse my computer for driver software. Then, click Browse for the file location path. If you have installed Arduino in C: root drive, then browse the location to C:\arduino-1.5.3\hardware\arduino\avr\tools and click OK as shown in Fig. 7.

After selecting the driver, click Next as shown in Fig. 8. On Windows security alert pop-up window, click Install.

open Device Manager and locate Arduino com port under Ports (COM & LPT) option as shown in Fig. 9. Note the COM port number; you will need it while uploading software on Galileo.

Open Arduino IDE and select Tools→Board. Make sure that Intel Galileo is selected (Fig. 10).

Under Serial Port, select COM port on which Galileo board is connected (Fig. 11).

Software installation on Linux

Arduino software for Linux is in .tgz format. To extract the file you will need Tar tool. Before going ahead, remove Modem Manager System Service as it can hinder working with Galileo. Remove it by running the following command on the terminal:

```
sudo apt-get remove modemmanager
```

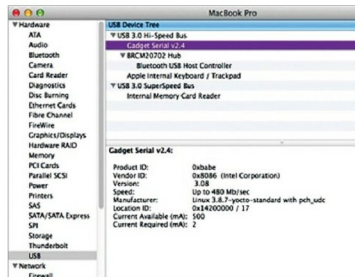


Fig. 14: Choosing the driver on Mac

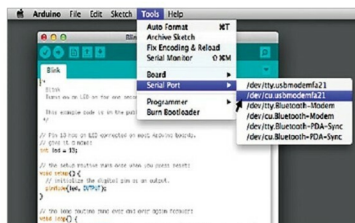


Fig. 15: Arduino on Mac

On the terminal, navigate to the folder in which Arduino IDE is downloaded (in this case, it is in Downloads) and extract the file by running the following commands:

```
cd~/Downloads
tar -xzf <Arduino1.5.3_Galileo.tgz>
C - /
```

Navigate to the extracted file and run Arduino by running the following commands:

```
cd ~/arduino-1.5.3
sudo ./arduino
```

(Arduino has been run as root because sometimes Arduino does not launch properly without root privilege.)

Driver installation. After software installation on the computer is complete, connect the board to the computer and install drivers.

Connect regulated 5V supply to Galileo and then connect Galileo to the computer via a USB cable.