

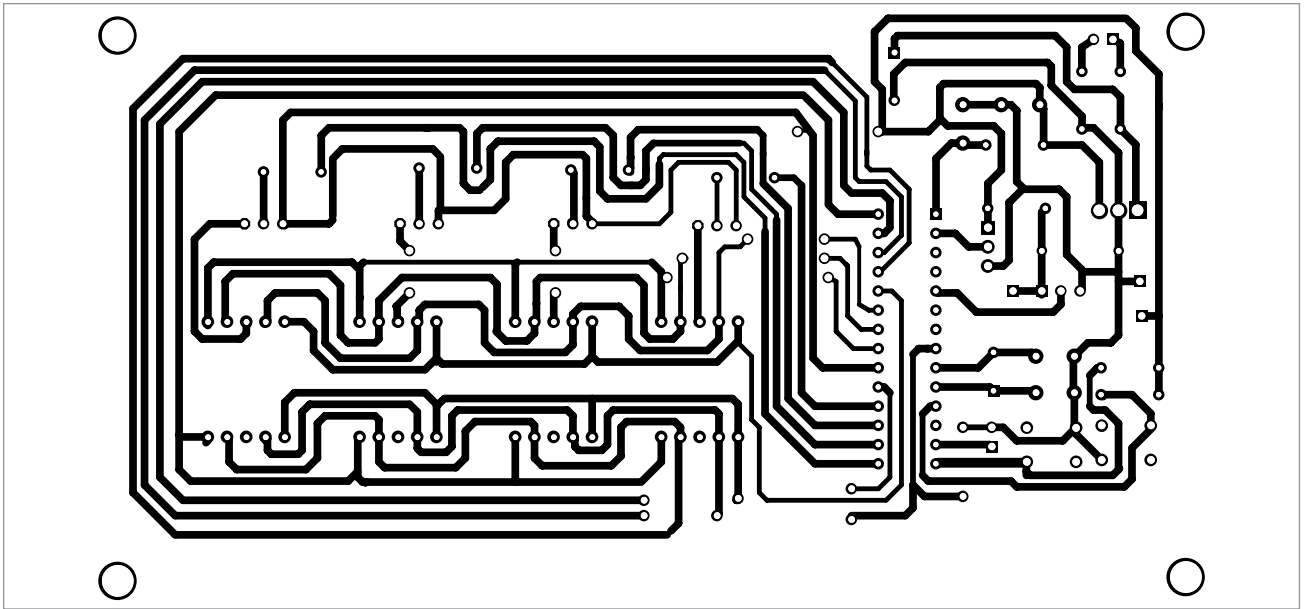


Fig. 2: Actual-size PCB layout for the alarm clock-cum-temperature indicator circuit

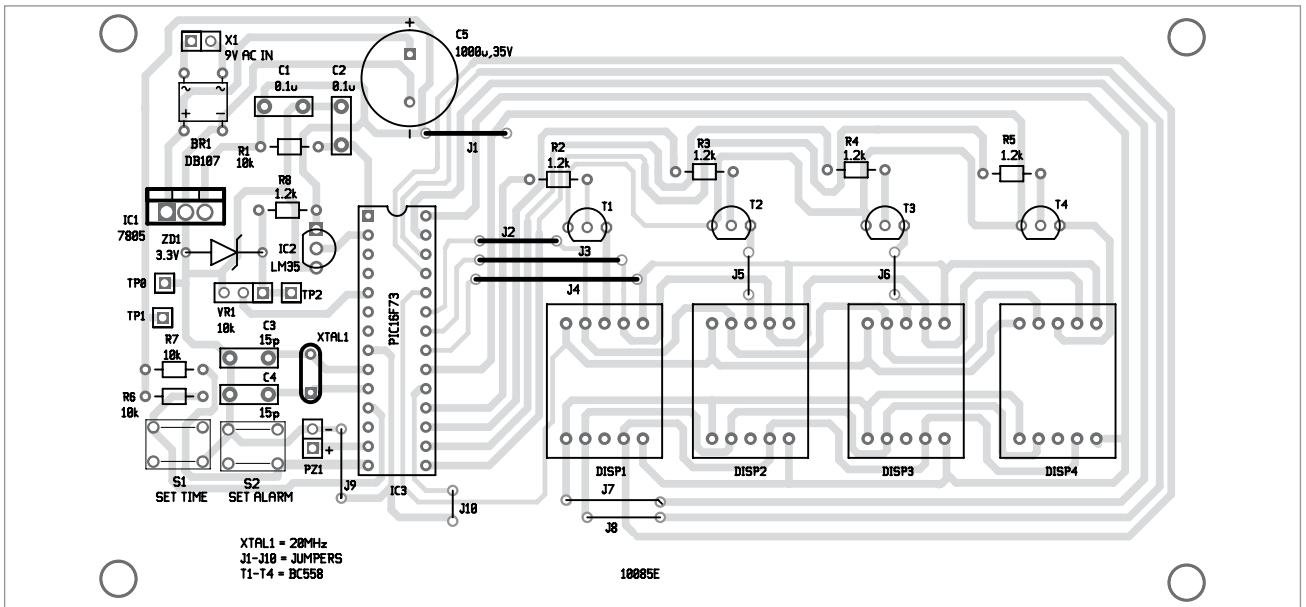


Fig. 3: Component layout of the PCB

in a hex file. Using PICKit2 programmer it can be entered into a fresh PIC chip. Note that the configuration byte is 52 hex. You use 42 hex if you want to protect the code from being copied.

Construction and testing

An actual-size, single-sided PCB of the circuit is shown in Fig. 2 and its component layout in Fig. 3. Assemble the circuit on the PCB as it minimises time and assembly errors.

Carefully assemble the components and double-check for any error(s). Use a proper IC base for the MCU.

CON1 is a 2-pin connector used to connect a 9V battery. For trouble-

shooting, verify the voltages are as listed in the test points table.

After powering on the circuit, a default value will be displayed. Press S1 to set the desired time. After setting the time, press S2 to set alarm time. Now, present time will be shown on the display. The buzzer (PZ1) will sound at the time set for the alarm. **EFY**

EFY Note

The source code of this project is included in this month's EFY DVD and is also available for free download at source.efymag.com

Prof. K. Padmanabhan is an emeritus professor at Alagappa college of Technology, Guindy, Chennai