

new blank project schematic window. Place the components from option Place→Part. OrCAD library provides a large variety of compo-

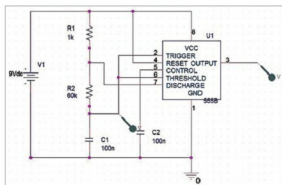


Fig. 15: Circuit with test points

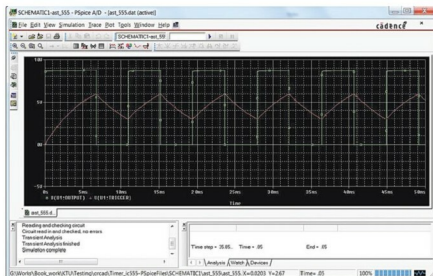


Fig. 16: Output window

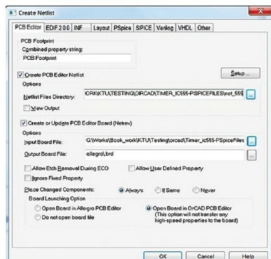


Fig. 17: Window for creating netlist

nents. Each component has its own library file. Add those library files to Place Part window using Add Library option.

6. Select the required components from Place Part window. Preview and other details are available in the same window and are visible when the component is selected (Fig. 14). You need to give the exact component name in the part's place.

7. After placing the components in

the schematic, connect the terminals with a wire that can be selected from Place→Wires. Make sure that no parts are left open without connections.

8. Place markers at the corresponding (test) points of circuits where you need to observe the output. For selecting a marker, go to PSpice→Markers→Voltage Level (for voltage reading) as shown in Fig. 15.

9. Simulation can be done by making a simulation profile. It can be done from New Simulation Profile option in PSpice menu. Give a profile name and click Create. This leads to a simulation setting window. We can give customisation for simulation in this window. In this particular example, select Analysis Type Time Domain (Transient). Give sufficient time to run and check Skip The Initial Transient Bias option. After giving inputs, click OK.

10. Select Run option from PSpice menu and give sufficient inputs. This opens a new simulation window in which you can verify the signals at test points (Fig. 16).

11. Like in all other EDA tools, OrCAD components must also have their own footprint, which is the mechanical outline of the device on the PCB board. Check the property of the device by

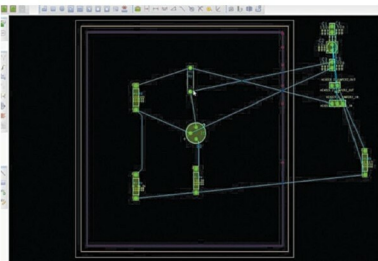


Fig. 18: Placing the components