

Fig. 3: Placing components in schematic window

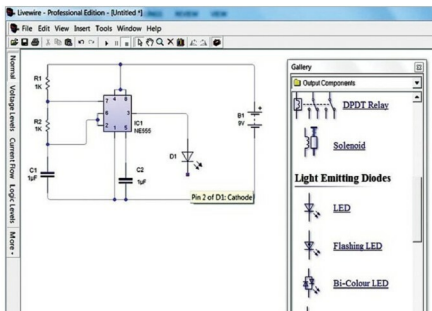


Fig. 4: Connecting the terminals to complete the circuit

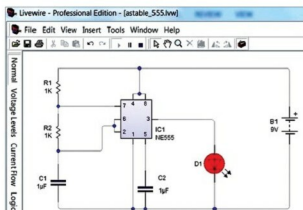


Fig. 5: Simulation of the circuit

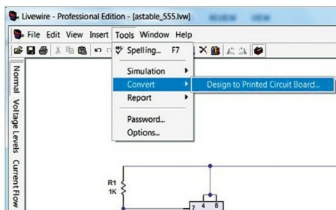


Fig. 6: PCB converting option

4. After placing the components, connect their terminals as per the circuit. Simply click and drag the mouse pointer between terminals to make the connections (Fig. 4).

5. Save the schematic file in the desired location of the computer. The file will be with extension .lww

6. Simulate or run the circuit by clicking Run button provided in the standard panel or by simply pressing F9. If some errors are present, these will be intimated in Error window.

7. Simulation can be verified on the schematic window itself. In this example we use a red LED to verify the result as shown in Fig. 5.

8. For making the PCB layout of the circuit, ensure that the PCB Wizard window is open.

9. Click on Tools option in Menu panel and select Convert Design To PCB option (Fig. 6). PCB Wizard window will open. Give appropriate customisation for a good percentage of routing. If automatic PCB generation does not have sufficient percentage of routing, do the customisation to get a good percentage as shown in Fig. 7. Automatic routing is not always recommended.

10. To take a printout for PCB fabrication, do not forget to take the mirror image of the PCB