

is already an app with that name on the mobile). In the Properties pane, change the title to 'Bluetooth Control.' In the Palette pane, go to User Interface > ListPicker and drag it to the viewer pane. In the properties pane, change the height to 10 percent, width to Fill Parent, and text to Scan.

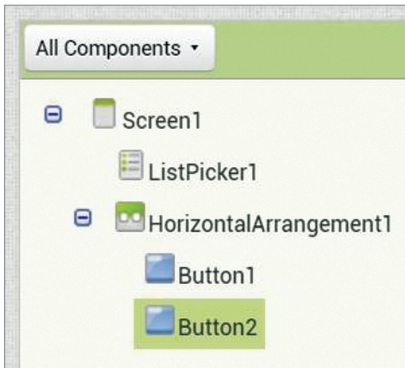


Fig. 5: HorizontalArrangement1 of the components pane

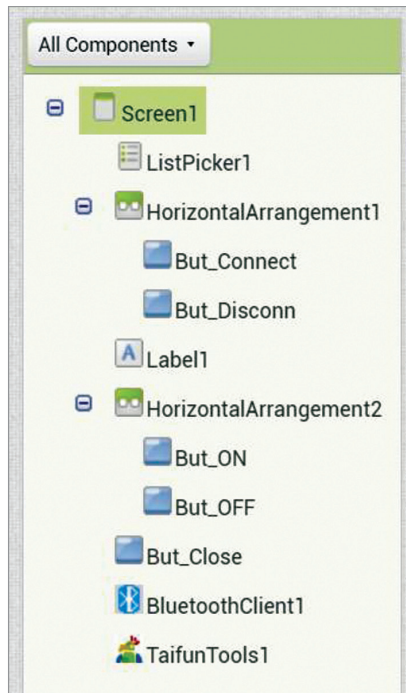


Fig. 8: Final setting on screen

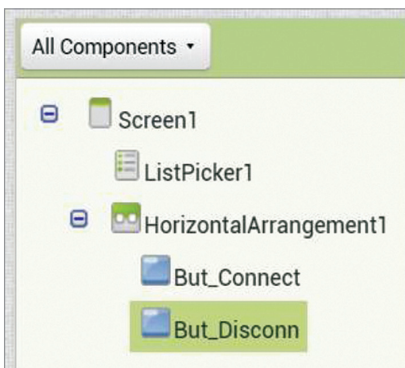


Fig. 6: Renaming of components

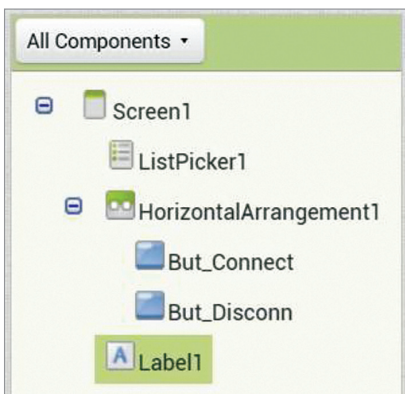


Fig. 7: How to change properties of the label

In the palette pane, go to Layout > HorizontalArrangement and drag it to the Viewer pane, below ListPicker1. In the Properties pane, change the height to 10 percent and width to Fill Parent. Once again in the Palette pane, drag User Interface > Button to the HorizontalArrangement box. Drag another button and place it next to the first button. In the All Components pane, they will appear as Button1 and Button2 below HorizontalArrangement1, as shown in Fig. 5.

Give meaningful names to Button1 and Button2. Select Button1. At the bottom of the All Components pane, there is a Rename button. Click it. A window will open where a new name can be typed. Rename it as 'But_Connect'. Now, select Button2 and rename it as 'But_Disconn'. It will appear as shown in Fig. 6.

Select 'But_Connect' again. In the Properties pane, change the height to Fill Parent, width to Fill Parent, and text to Connect. Now

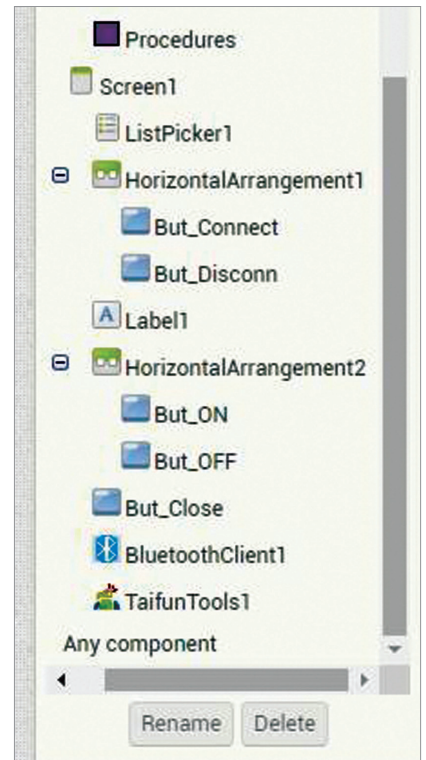


Fig. 9: Block setting

select But_Disconn and change the height to Fill Parent, width to Fill Parent, and text to Disconnect.

In the Palette pane, under User Interface, drag Label and place it in the Viewer Pane below HorizontalArrangement1 (i.e., Connect and Disconnect buttons). Change the properties of Label1 as follows: Height to 10 percent, width to Fill Parent, and text to Not Connected. Set Text alignment to Centre. See Fig. 7 to check how to change the properties of a label.

Drag HorizontalArrangement (Palette > Layout) and place it under Label1 in the Viewer pane. Change the properties to height of 10 percent and width to Fill Parent. Drag button (Palette > User Interface) and place it in this HorizontalArrangement. Drag another button and place it next to the first one. Rename these buttons as 'But_ON' and 'But_OFF' respectively.

In the 'All Components' pane,