

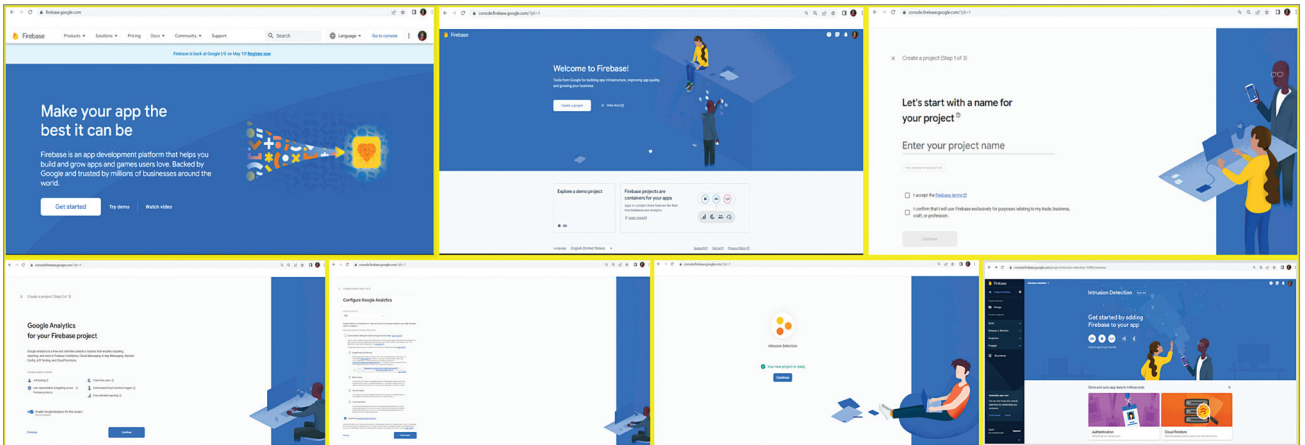


Fig. 5: Screenshots of the vital steps

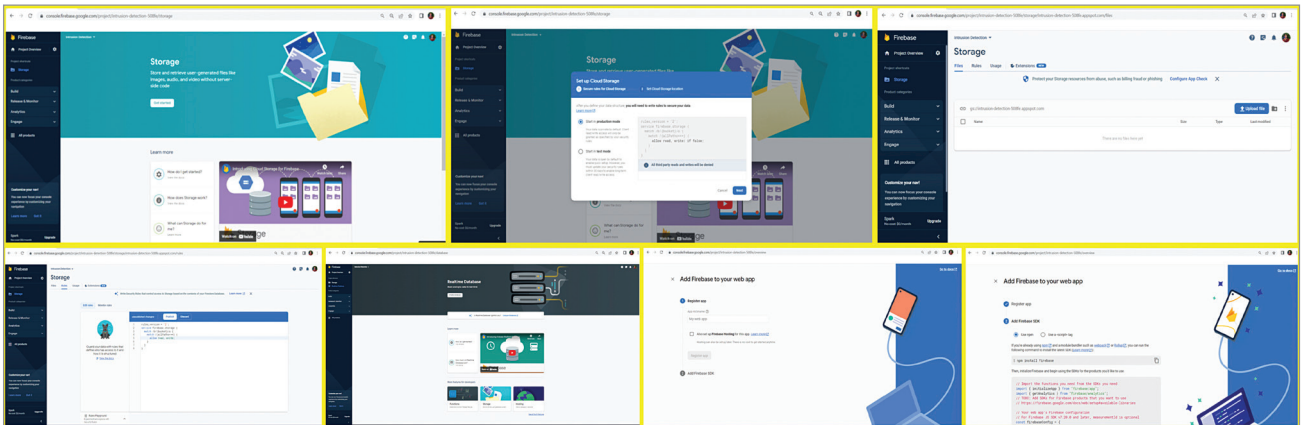


Fig. 6: Screenshots of Step 5 onwards

Crashlytics, Cloud Messaging, In-App Messaging, Remote Configuration, A/B Testing, and Cloud Functions. To activate it, click on Enable Google Analytics and then on the Continue button.

Enter Analytics location—the country/region of your organisation. This does not affect where Google may process and store Customer Data for Firebase. (Data sharing settings: The author didn't opt for the default settings for sharing Google Analytics Data.) Accept the Google Analytics terms and move on to Create a Project button.

4. Your new project is ready. Press the Continue button; your project name should appear on the screen now. The sidebar provides various choices related to your

```
File Edit Format Run Options Window Help

import RPi.GPIO as GPIO
import time
from datetime import datetime
from picamera import PiCamera
from time import sleep
import os
GPIO.setwarnings(False)
GPIO.setmode(GPIO.BOARD)
PIR_PIN = 7
#camera.rotation = 180
GPIO.setup(PIR_PIN, GPIO.IN)
import pybase
firebaseConfig = {
    'apiKey': '_____',
    'authDomain': '_____',
    'databaseURL': '_____',
    'projectId': '_____',
    'storageBucket': '_____',
    'messagingSenderId': '_____',
    'appId': '_____',
    'measurementId': '_____'
}
firebase = pybase.initialize_app(firebaseConfig)
storage = firebase.storage()
camera = PiCamera()
```

Fig. 7: Code snippet to set Firebase credentials

project. Select Build, select Storage, and select Get Started.

See Fig. 5 for the screenshots of the vital steps mentioned above.

5. The author preferred to start in production mode. To do so, press the button Next and enter Cloud Storage Location. (After you set this location, it cannot be changed later. This location will also be the default location for Cloud Firestore. The author selected Asia