

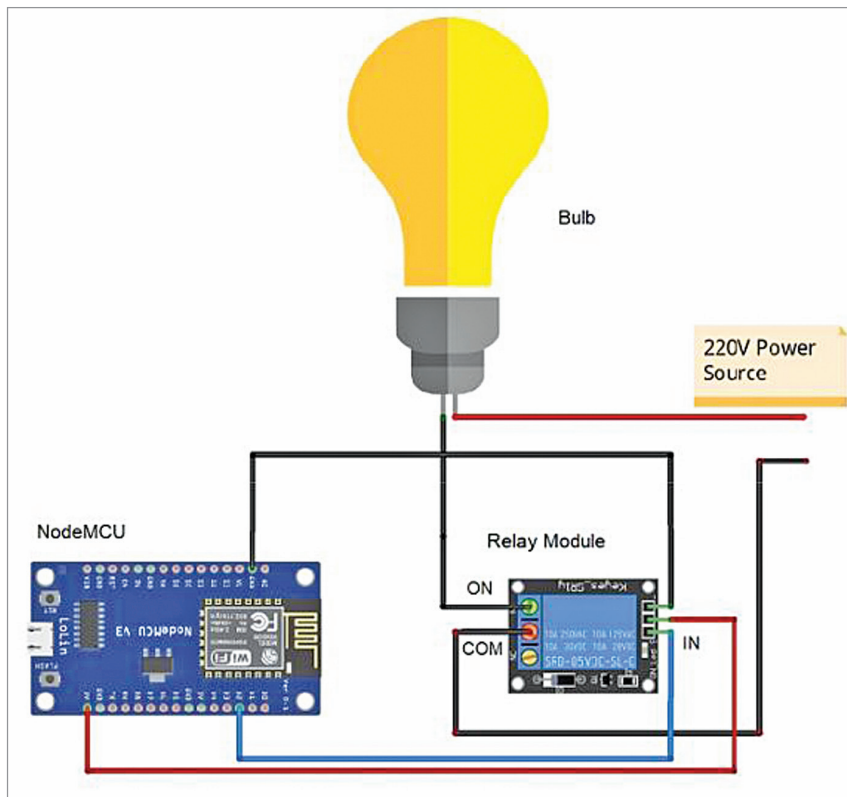


Fig. 6: Circuit connections

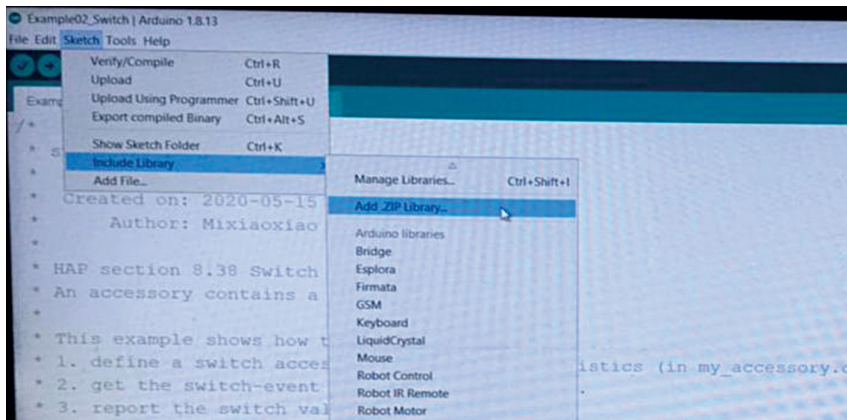


Fig. 7: Adding .Zip Library to Arduino IDE

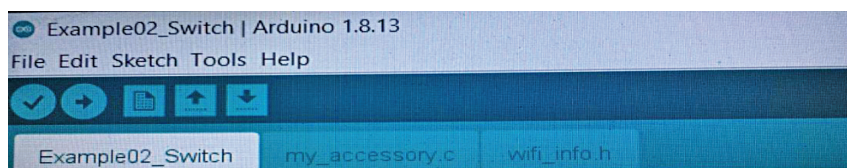


Fig. 8: Example02_Switch

```
const char *ssid = "your-ssid";
const char *password = "your-password";
```

Fig. 9: Setting SSID and password

can connect the circuit in a similar way to control the remaining three electrical appliances.

There are two wires in the bulb holder, as shown in Fig. 6. Cut one of the wires in the middle and connect one of the cut ends to COM pin and the other to NO terminal of the relay module. Connect pin D2 of NodeMCU to IN pin of the relay module.

Software

Download Arduino-HomeKit library from the link <https://github.com/Mixiaoxiao/Arduino-HomeKit-ESP8266>

After downloading, open Arduino IDE and follow the steps given below.

1. From the Arduino IDE, click on Sketch and then Include Library option, as shown in Fig. 7. Next click on Add .Zip Library and select HomeKit-ESP8266 library. The three files Example02_Switch, my_accessory.c, and wifi_info.h will be included in the Arduino IDE.

2. Open Example02_Switch file, as shown in Fig. 8. The original 'Example02_Switch.ino' code includes only one relay module. For adding multiple (four) relays, you need to make some changes in the code, as explained in the next section.

3. In Wifi_info.h file (Fig. 9), mention your own SSID and password.

4. First make some changes in 'my_accessory.c' code. To add many devices, copy and paste the highlighted part in Fig.10 as many times as the number of devices to be added in the project.

After adding multiple times, change the 'id' in the line "HOMEKIT_ACCESSORY (.id = 1, .category = homekit_accessory_category_switch, .services = (homekit_service_t*[])" as shown in Fig. 11.

Change .id = 1 to .id = 2. If you have added the third device, change it to .id = 3. So every time you copy and paste the highlighted part, increase the .id number.