EXPNO:06 Hemanth kumar.A

231901010 DATE:29.08.2024

Customize Switch with Network Modules using Cisco Packet Tracer

AIIVI.	A	lΜ	٠
--------	---	----	---

To Customize Switch with Network Modules using Cisco Packet Tracer

To Customize Switch with Network Wodules using Cisco Lacket Tracer
1. Open Cisco Packet Tracer
Launch Cisco Packet Tracer on your computer.
2. Add a Switch to Your Workspace \Box In the device toolbar (usually on the left side of the
screen), locate the "Switches" section.
Drag and drop a switch model onto the workspace. For instance, you might choose a model like the "2950" or "2960."
3. Access the Switch's Physical Layout
 Click on the switch in the workspace to open its configuration window. Navigate to the "Physical" tab to see the switch's physical layout and modules.
4. Add Network Modules
 In the "Physical" tab, you might see options to add or modify network modules. Click on the slot where you want to add a module. You can choose from available modules such as different types of Ethernet or Fiber modules. Drag the module from the list of available modules and drop it into the slot on the switch.
5. Configure the Modules After adding the module, switch to the "Config" tab in the
switch's configuration window.
Here, you can configure the ports provided by the module. For example, you can set IP addresses, VLAN configurations, and other settings for the new interfaces.

6. Configure the Switch Ports

- Switch to the "Config" tab to configure ports on the switch. Here, you can set parameters for each port.
- Select the specific port or range of ports you want to configure. You can set parameters such as VLAN assignments, port descriptions, and more.
- For example: o To configure a port to be in a specific VLAN:
 - ☐ Select the port or range of ports.

- ☐ Assign the VLAN ID under the VLAN settings. o To set a description for the port:
 - ☐ Enter a description in the "Description" field.

7. Using the CLI for Detailed Configuration

- Switch to the "CLI" tab for command-line interface access.
- Enter configuration commands to set up the switch. Here's an example of how to configure VLANs and interface settings via CLI:

```
bash
                                                                           (7) Copy code
Switch> enable
Switch# configure terminal
! Configure VLAN
Switch(config)# vlan 10
Switch(config-vlan)# name Sales
Switch(config-vlan)# exit
! Configure VLAN interface
Switch(config)# interface vlan 10
Switch(config-if)# ip address 192.168.10.1 255.255.255.0
Switch(config-if)# no shutdown
Switch(config-if)# exit
! Assign ports to VLAN
Switch(config)# interface range fa0/1 - 24
Switch(config-if-range)# switchport mode access
Switch(config-if-range)# switchport access vlan 10
Switch(config-if-range)# exit
! Save the configuration
Switch# write memory
```

8. Save Your Configuration

☐ Once you've configured the modules and ports, be sure to save your configuration. Use commands in the CLI (Command Line Interface) if you're using a model that supports CLI commands.


For example:


```
Copy code
bash
Switch> enable
Switch# configure terminal
Switch(config)# interface range fa0/1 - 24
Switch(config-if-range)# description Connected to LAN
Switch(config-if-range)# no shutdown
Switch(config-if-range)# exit
Switch(config)# vlan 10
Switch(config-vlan)# name Sales
Switch(config-vlan)# exit
Switch(config)# interface vlan 10
Switch(config-if)# ip address 192.168.10.1 255.255.255.0
Switch(config-if)# no shutdown
Switch(config-if)# exit
Switch# write memory
```

9. Test Your Configuration

- Use the simulation mode to test the network configuration.
- Add devices (PCs, routers, etc.) and connect them to the switch to ensure that everything is working as expected.

Output:

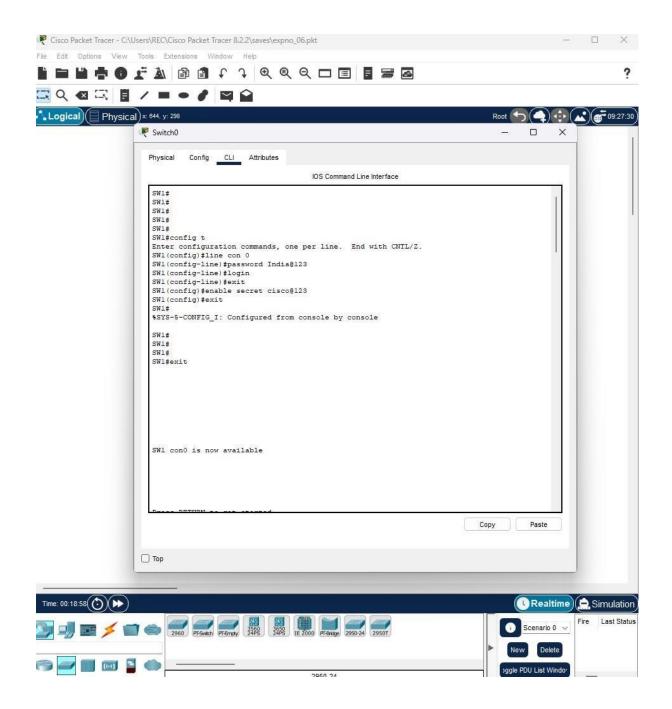

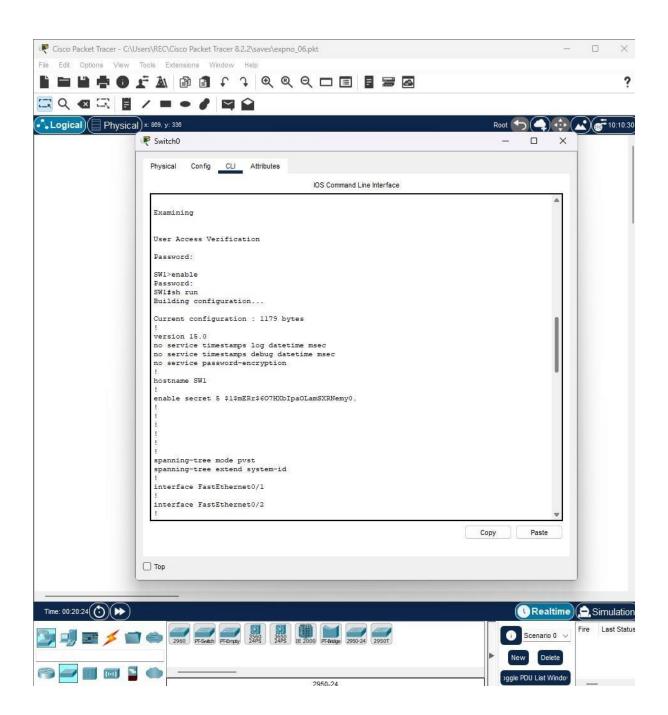

```
Switch0
                                                                                                     X
            Config CLI Attributes
  Physical
                                            IOS Command Line Interface
   ^C
   line con 0
   password India@123
   login
   line vty 0 4
   login
   line vty 5 15
   login
   end
   SW1#
   SW1#
  SWl#copy run startup-config
Destination filename [startup-config]?
   Building configuration...
   [OK]
  SW1#
                                                                                        Сору
                                                                                                     Paste
□ Тор
```

Result:

Switch with Network Modules using Cisco Packet Tracer is Customized.