

Notification Function

The Notification function lets you configure push notifications that can be sent from the DELMIA Apriso server to the DELMIA Apriso mobile app.

A notification contains a message and, optionally, buttons. Tapping the notification message or button in the mobile app navigates the user to a specific FlexPart.

Prerequisites and References

Notifications are supported with DELMIA Apriso Android and iOS apps 2.6.0. Refer to **Mobile Apps Guide** for details on:

- ▶ Back-end service configuration.
- ▶ Notification behavior on mobile devices.

For details on managing notification-registered devices, refer to [DELMIA Apriso Portal Help](#) .

To Add the Notification Function

1. Drag the Notification function from the [toolbox](#) to the function navigation diagram or double-click it in the toolbox.
2. Complete the **General** and **Recipients** tabs.

General Tab

In the **General** tab, you can configure the notification:

- ▶ Title
- ▶ Message
- ▶ Actions
- ▶ Additional properties

Title and Message

The notification title and message.

Title

Code:

Translation: Notification title.

Message

Code:

Translation: Notification message.

UI Element Description

Code	The name of the dictionary item linked to the notification title or message. Available actions: ▶ : adds a dictionary item to the Dictionary and links it to the notification title or message. ▶ : opens the window with a list of existing dictionary items. The selected item is linked to the notification title or message. ▶ : unlinks the dictionary item. ▶ : opens the Dictionary Translations screen in the context of the linked dictionary item or message. For details, refer to Dictionary Help . Adding the code is optional.
Translation	The notification title or message displayed to the user of the mobile app. If a dictionary item is linked in the Code field, the translation of this dictionary item is used.

Actions

Actions that are triggered when the user of the mobile app taps the notification or notification buttons. These actions determine which FlexPart the user is navigated to and what buttons are available.

To distinguish whether the user taps the notification or the notification button, the linked FlexPart uses the parameter named `NotificationAction`. This parameter is configured in the FlexPart editor **General** tab. It must be overridable and of the `char` type. For details on the parameter configuration, refer to [FlexParts Help](#) .

Actions

FlexPart

NotificationMaintenance





Parameters



Name	Type	Value	Source
------	------	-------	--------

Additional Actions





Name	Code	Translation
▶		

UI Element	Description
FlexPart	The FlexPart that the user is navigated to after tapping the notification in the mobile app. You can link only the FlexParts that are supported by DELMIA Apriso mobile apps. ▶ : opens the window with a list of FlexParts. The selected FlexPart is linked to the notification. ▶ : unlinks the FlexPart. When the user of the mobile app taps the notification message, the app opens the linked FlexPart with the NotificationAction parameter value set to Default.
Parameters	The parameters that are used in the action performed by the linked FlexPart. The Parameters grid is populated only with the parameters that have the Allow Override checkbox selected in the FlexPart editor General tab. For details, refer to FlexParts Help . The columns available in the grid: ▶ Name: the parameter name. ▶ Type: the parameter type. ▶ Value: the parameter value. The column is enabled only when Value is selected in the Source list. ▶ Source: the parameter source: ▷ FlexPart: the parameter is taken from the linked FlexPart. ▷ Input: the parameter is taken from the function input. ▷ Value: the parameter is taken from the value entered in the Value column. The NotificationAction parameter is never displayed in the grid.

UI Element

Description

Additional Actions	Supported on Android.
	The actions that are available to the user of the mobile app as buttons displayed below the notification message.
	Tapping a notification button opens the linked FlexPart with the NotificationAction parameter value overridden by the action name.
	To configure an action, add a row in the Additional Actions section. The columns available in the grid: ▶ Name: the action name that will become the value of the NotificationAction parameter. ▶ Code (optional): the name of the dictionary item linked to the action. ▶ Translation: the label displayed on the notification button. If a dictionary item is linked in the Code field, the translation of this dictionary item is used. You can add a maximum of three actions.

Additional Properties

Additional properties that you can configure for the notification.

Additional Properties

Expiration

1

Days

Category

Customization

Edit Custom Parameters

UI Element

Description

Expiration	The maximum time the system waits for an offline device to come online to deliver a notification.
Category	Supported on Android. The notification category. After you enter the category name, the category with the same name is created in the notification settings of the mobile app. The user of the app can customize the notification settings at a more granular level.
Customization	For advanced usage scenarios. Used to provide parameters directly to Firebase Cloud Messaging (FCM). For details, refer to the FCM documentation.

Recipients Tab

In the **Recipients** tab, you can specify the employees who will receive the notification on their mobile device.

General

Recipients

List of EmployeeNo from Function Input

Selected Roles

Roles

Name

Description

UI Element	Description
List of EmployeeNo from Function Input	The notification is delivered to the employees configured in the function input.
Selected Roles	The notification is delivered to the employees with the roles specified in the Roles grid. To add an employee with a specific role: 1. Add a row in the Roles grid. 2. In the Selecting Roles window, select one or more roles and click OK. If you select multiple roles, an employee needs at least one role to receive a notification.

Notification Function Example


Scenario

You want to send a notification to the mobile device of a shop floor operator about the production slowdown detected in a work center.

The notification is linked to the Production Status screen that displays facilities, work centers, and their orders. The screen contains two overridable parameters: `Facility_Filter` and `NotificationAction` that are used to customize the screen behavior.

Function Configuration

Configure a DFC with the following step and function logic:

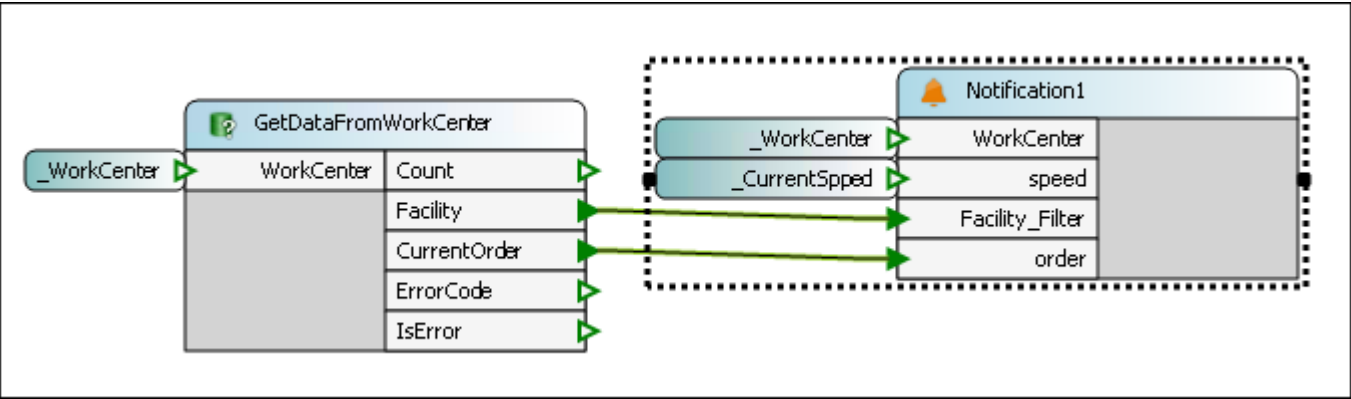

Type
Notification

☐ Log Events

Title

Code: +

Translation: Production Slowdown

Message

Code: +

Translation: Production slowdown was detected on {WorkCenter} work center. Current speed is {speed} items/min. Tap here for more info.

Actions

FlexPart: ProductionStatus

Parameters

Name	Type	Value	Source
Facility_Filter	Char		Input

Additional Actions

Name	Code	Translation
Stop		Hold {order}
Escalate		Escalate

Configuration Results

See how the function configuration is reflected in the structure of the notification displayed to the user in the mobile app:

Type: Notification

☐ Log Events

Title

Code: 1

Translation: Production Slowdown

Message

Code: 2

Translation: Production slowdown was detected on {WorkCenter} work center. Current speed is {speed} items/min. Tap here for more info.

Actions


FlexPart: ProductionStatus

Parameters

Name	Type	Value	Source
Facility_Filter	Char		Input

Additional Actions 3

Name	Code	Translation
Stop		Hold {order}
Escalate		Escalate

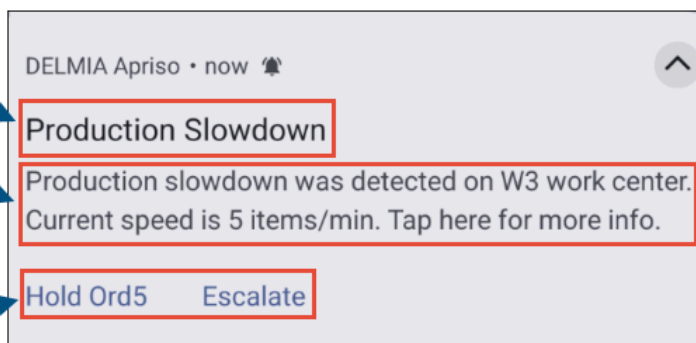

1. The notification title.
2. The notification message in which the {WorkCenter} and {speed} placeholders are replaced with values from the function input.
3. The buttons displayed in the notification that execute specific actions after being tapped (supported only on Android).

After the user taps the notification on the mobile device, the linked FlexPart is displayed:

Type: Notification

☐ Log Events

Title

Code:

Translation: Production Slowdown

Message

Code:

Translation: Production slowdown was detected on {WorkCenter} work center. Current speed is {speed} items/min. Tap here for more info.

Actions

FlexPart: ProductionStatus 4

Parameters

Name	Type	Value	Source
Facility_Filter	Char		Input

Additional Actions

Name	Code	Translation
Stop		Hold {order}
Escalate		Escalate

Facility	Work Center	Current Order
C1P1		
C1P1	W1	Ord1
C1P1	W2	Ord1
C1P1	W3	Ord5

Selected records: 0

4. The FlexPart linked to the notification contains the Production Status screen that displays facilities, work centers, and their orders.
5. The parameter used in the linked FlexPart. It filters the production status grid by a facility.

After the user taps the **Escalate** button in the notification, the screen opens with an escalation pop-up window:

