

Screen: General Tab

Properties

GeneralParametersRolesAdvancedChange Flow

☐ Base Screen

Name

Screen1

Revision

REV.001.000

☒ Default Revision

Title

Code:

+

↺

↻

≡

Translation:

Description

Layout

Name

PortalSimple2Panels

Revision

REV.001.000

↺

↻

↻

≡

Instance

Navigation

Normal

On Initialize

☒ DFC☐ Action Script Function

Name

PortalPagingNext

Revision

APR.TPL.001.001

↺

↻

↻

≡

On Load

☒ DFC☐ Action Script Function

Name

PortalScreen_Initialize

Revision

(none - revision determined at runtime)

↺

↻

↻

≡

Header

Name

PortalHeader

Revision

(none - revision determined at runtime)

↺

↻

↻

≡

☐ Inherit Header from Layout Default Header

Version

1.0.0.2

Edit Mask...

Version host

https://media.3ds.com/support/DELMIA-Apriso/2025/Online/ProcessBuilder/index.htm?_gl=1*109t8fz*_ga*MTk5OTg0NzQ3MS4xNzc3NjQ0NjA3*...

2/7

Field	Description
Base Screen	This is the screen from which the user starts the business flow. If selected, the Screen is available in the header search.
Name	The unique name of the Screen. It is used to identify the Screen and to define the flow between the Screens.
Revision	The Screen revision number (must be unique). The revision of the Screen which will be used in runtime. It is selected by default for a newly created Screen (the next revisions of the Screen will not be selected as default ones).
Title	A descriptive Screen name. It can be shown directly on the screen as part of the header or in the breadcrumb. ▶ Code – the name of the Dictionary Item linked to the Screen title. The following actions are available: ▶  – adds a Dictionary Item (written in the text box) to the dictionary and links it to the Screen title ▶  – opens the Dictionary Items suggestion lookup window, which lists the existing Dictionary Items from which the user may choose ▶ When the user enters a part of the Dictionary Item name, the system suggests a list of matching entries from the database ▶ The chosen Dictionary Item is linked to the Screen title ▶  – unlinks the current Dictionary Item (it is removed from the Code field) ▶  – opens the Dictionary Translations screen in the context of the linked Dictionary Item (for more information, refer to the Dictionary Help) ▶ Translation – the translation of the Screen's title according to the translation added in the Dictionary Translations screen Titles can be formatted using all available variables from the Portal Session. For example, the title "Details of the {ProductNo} product" defined for a Screen would be formatted to "Details of the ABC product", assuming the ProductNo variable exists in the session and has the value of "ABC".
Description	The description of the Screen.
Layout	The Layout chosen for the Screen. The following actions are available: ▶  – invokes the Layouts dialog (it contains all of the Layouts already defined), where a Layout can be linked. If the Layout is already linked, there is possibility to convert to another Layout. Click this button to choose another Layout and then follow instructions located on the Layout Panel Converter pop-up window. ▶  – unlinks the Layout

The best practice is to link a Layout by clicking  in the workspace. For more information, see [Layout](#).

- ▶  – clicking this button takes you to the Layout workspace that is linked (for more information, see [Layout](#))

In the case of PB Projects, the pop-up will display a default revision of the Layout in the [Project](#).

If you deploy a Layout entity on the destination server where this Layout is already linked, the Screen that uses the Layout will use its old version rather than the one already deployed. You can manually relink recently deployed Layout for each Screen.

Instance	This is used when the same Screen has to be used with a different context. For more information, see Instance .
Navigation	Defines how the Screen will interact with the Portal Session and the Screen Stack, e.g., whether a snapshot of the Screen will be stored in the Screen Stack or not. The drop-down menu presents the options: ▶ Home – the first Screen in the stack, used to reset the whole Screen Stack history ▶ Sub-Portal – used to create the new lower level Screen Stack session, ▶ Normal – put in the Screen Stack with all related variables ▶ Intermediate – these Screens are temporary and are not put in the Screen Stack ▶ Loop – the Screen is marked as the start of the loop ▶ Loop Level 2 Close ▶ Loop Level 3 Close For more information, see Navigation Type.
On Initialize	A DFC or action script function which feeds the data that have to appear on the Screen when it is shown for the first time. The On Initialize choice is used to define the Actions that will be triggered before the Screen load. The following options are available to select: ▶ DFC – only DFCs of action or initialize subtype can be linked (appear in the DFCs suggestion lookup window). For example, the DFC can display pop-up windows and handle the Screen routing before the user enters the Screen. The On Initialize DFC is called only during the first load of the Screen in the current session (except when the Screen is of the Home navigation type, in which case the DFC is called each time the Screen is loaded). This option is disabled for Screens in an Offline Module. ▶ Action Script Function – only default revisions of Action Scripts that are in the Active, Prototype or Development in Progress status can be linked (appear in the Action Script Functions lookup window) Name – the name of the Screen On Initialize DFC or Action Script Function

- ▶ The DFC used here should end with `_Initialize`
- ▶ For the On Initialize DFCs, Process Builder provides the **PortalScreen_Initialize** DFC template

Revision – the revision of the On Initialize DFC

The following actions are available:

- ▶  – invokes the **DFCs** lookup window, where the user can copy and link a Screen On Initialize DFC
- ▶  – invokes the **DFCs** or **Action Script Functions** lookup window, where the user can link an Action Script Function or the On Initialize DFC
- ▶  – unlinks the linked DFC or **Action Script Function**
- ▶  – invokes the workspace of the linked DFC or **Action Script Manager**. If there is more than one revision of that DFC, a pop-up listing all of the revisions will appear (to open one of the revisions, double-click it).

In the case of PB Projects, the pop-up displays default revisions of DFCs in the current **Project**.

It is also possible to change a View (see [Change View: Advanced Configuration](#)) with the use of the DFC.

The On Initialize DFC can also change the Views on Panels. By using the **PanelList** and **ViewList** Outputs, the Process Author can dynamically change the View presented inside a Panel.

On Load

The On Load choice is called each time the Screen is loaded (refreshed). It is called after the On Initialize DFC or Action Script Function. The following options are available to select:

- ▶ **DFC** – only DFCs of action or initialize **subtype** can be linked (appear in the **DFCs** suggestion lookup window)

This option is not available for Screens in an **Offline Module**.

- ▶ **Action Script Function** – only default revisions of Action Scripts that are in the Active, Prototype or Development in Progress status can be linked (appear in the **Action Script Functions** lookup window)

Name – the name of the On Load DFC or Action Script Function

Revision – the revision of the On Load DFC

The following actions are available:

- ▶  – invokes the **DFCs** lookup window, where the user can copy and link a Screen On Load DFC
- ▶  – invokes the **DFCs** or **Action Script Functions** lookup window, where the user can link a Screen On Load DFC or Action Script Function.
- ▶  – unlinks the linked DFC or Action Script Function

- ▶  – invokes the workspace of the linked DFC or [Action Script Manager](#). If there is more than one revision of that DFC, a pop-up listing all of the revisions will appear (to open one of the revisions, double-click it).

In the case of PB Projects, the pop-up will display default revisions of DFCs in the current [Project](#).

It is also possible to change a View (see [Change View: Advanced Configuration](#)) with the use of the DFC.


The On Load DFC can also change the Views on Panels. By using the PanelList and ViewList External Outputs, the Process Author can dynamically change the View presented inside a Panel.

Header

- ▶ **Name** – the name of the [HeaderView](#)
- ▶ **Revision** – the revision of the Header; the following actions are available:
 - ▶  – invokes the **Views** browser, where a Header View can be linked
 - ▶  – unlinks the linked Header View
 - ▶  – invokes the View's workspace screen. If there is more than one revision of that View, a pop-up listing all of the revisions will appear (to open one of the revisions, double-click it).

Inherit Header from Layout Default Header

If selected (and inactive), the Header inherited from the [Default Header](#) linked to the Layout will be available.

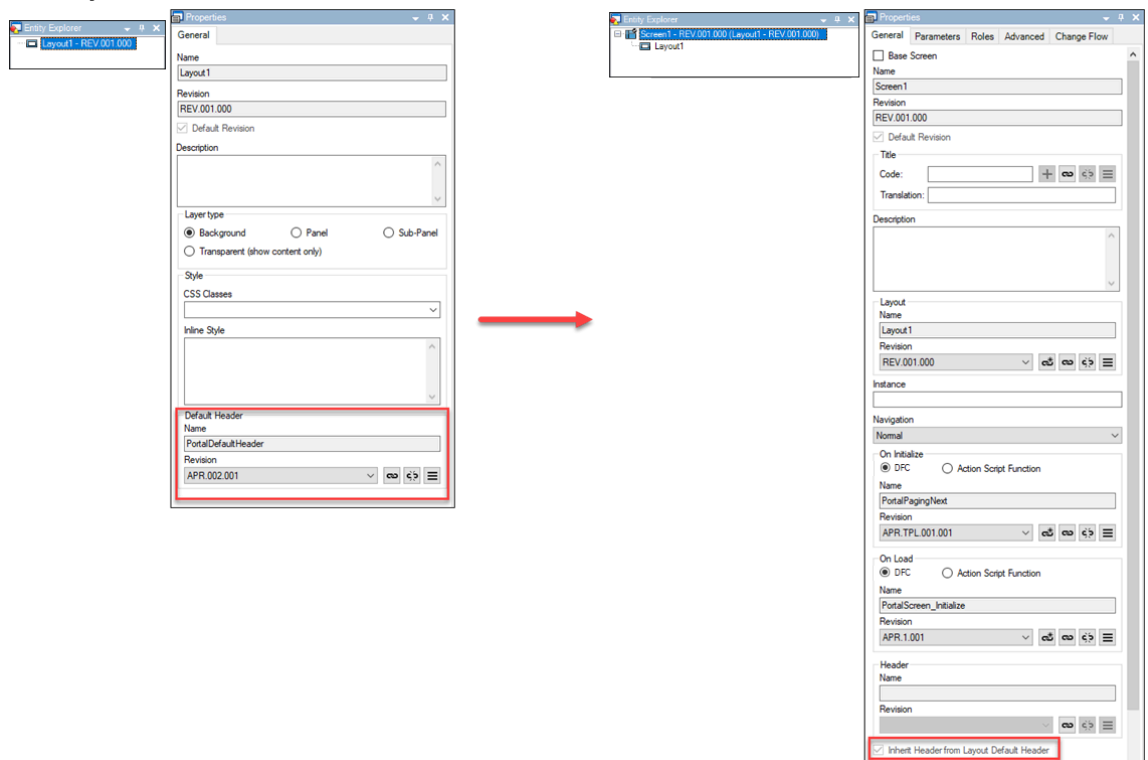

Version

An auto-incremented number of a Screen. It increases when you modify and save the Screen or change its status. Click **Edit Mask** to enter a custom mask.

Version host	The name of the last server where a Screen has been modified and saved or its status has changed.
---------------------	---

Instance

Sometimes you need to display the same Screen in a different context. You may have one Screen for displaying product details, but you want to distinguish instances for different products. This scenario is supported through identification of the instance of the Screen.

Following this example with the different products, assume that your Screen for displaying the product details is named "PRD-10" and its instance is set to {ProductNo}. If you navigate to this screen with the ProductNo variable set to "ABC", the screen instance will be set to "ABC", and if you change the product to "XYZ", the instance will be set to "XYZ". In both scenarios the Screen instance is different, so the system assumes that these are in fact different Screens. This is important for the support of automated navigation scenarios such as back or return, and also for calling the Screen On Initialize DFC.

This is an example of a Screen call stack:

Stack Element Number	Screen Code	Screen Instance
1	HOME-10	HOME-10
2	PRD-10	PRD-10ABC
3	PRD-10	PRD-10XYZ

For example, you are at the PRD-10 Screen, executed for XYZ (the last element of the call stack). If you issue a back Action from here, the system will go to the previous stack element, which is PRD-10 for ABC. If you issue a return Action, the system will go back to the last element with a different screen code, which in this case is HOME-10.

The back navigation will always restore the previous Portal Session (with all the variables except the global ones).

Navigation Type

The screen navigation type defines how the Screen will interact with the Portal Session and Screen call stack. This setting also directly implies what kind of navigation action can lead to this particular Screen.

Navigation	Session & Call Stack Interaction	Usage
Normal	The Screen is added to the call stack with a session snapshot.	A typical Screen supporting back navigation.
Intermediate	The Screen is not added to the call stack, no session snapshot.	A Screen that should not support back navigation.
Home	Before the display, the call stack is cleared. The Screen is added to the call stack with a session snapshot.	A starting base Screen, clearing the history.
Sub-Portal	The Screen is displayed in a new, separated, clean session.	The start Screen of a separated business flow.
Loop	The Screen is marked as the start of the loop. On the following Screen or View, the user can decide to close the loop by calling <i>Portal Action: Loop close</i> .	The start Screen for a Screen loop. After closing the loop, the navigation takes the user to the first Screen with the loop navigation.