
Wiring sheet 1 — Control panel to VMX

Left: the BACK of each part. Right: its column on the VMX bottom edge. Connect exactly the wires drawn.



POWER (not the VMX)

Red wire: battery + →
E-STOP → POWER → Titan +
Black: battery – → Titan –

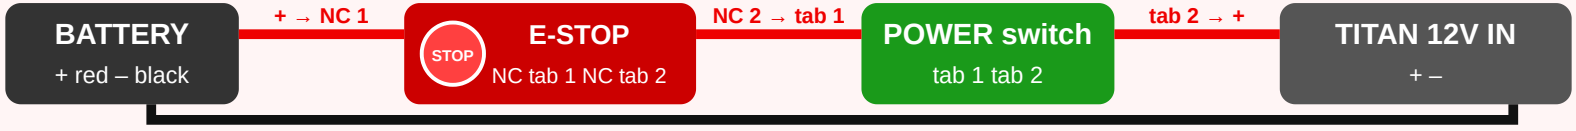

E-STOP: use the 2 tabs marked NC (connected until pressed). Pressed = all power cut.

Buttons: tabs **C → –** (black) and **NO → S** (colour).
Lights: – → – (black) and **+ → S** (colour).

Never use: a button's **NC** tab or its 2 small light tabs, or the VMX middle row **+**.

Can't read the tab marks? Multimeter on beep: a button's right pair beeps **only while pressed**. A light's **+** is usually the longer / red wire.

Check the board: the small **– + S** legend printed on the VMX shows the row order.