


Left foot: USB-C in from the charger (5 V sink, Rd 5.1k)

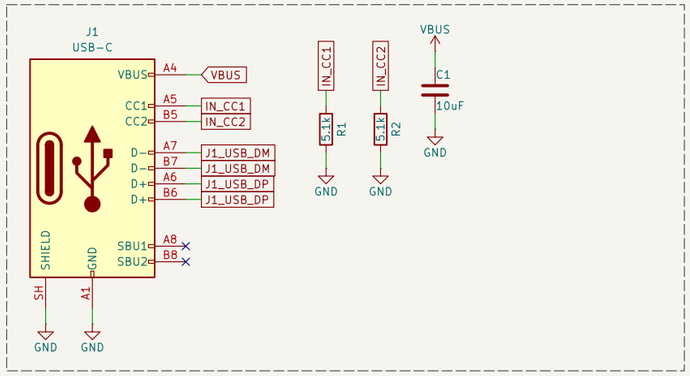


VBUS to the phone: P-FET, soft start

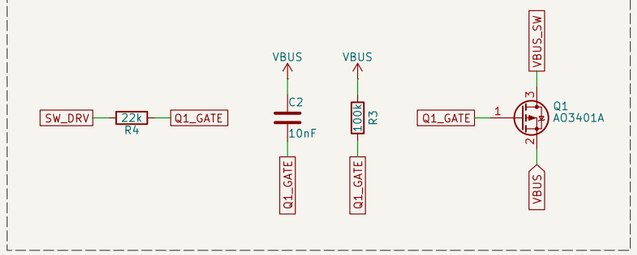


Switch driver

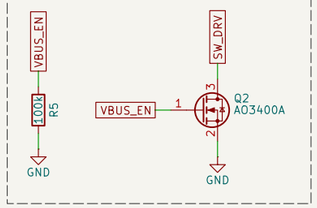


Charge current: 20 mOhm and INA180A2, 1 V per amp

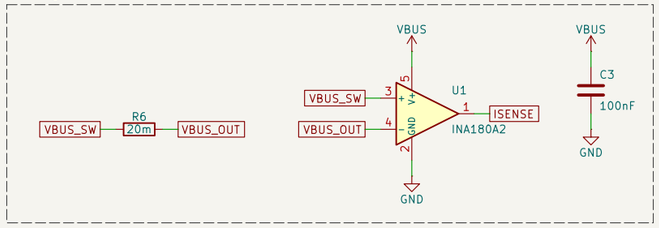


Right foot: USB-C out to the phone (Rp 1.5 A / default)

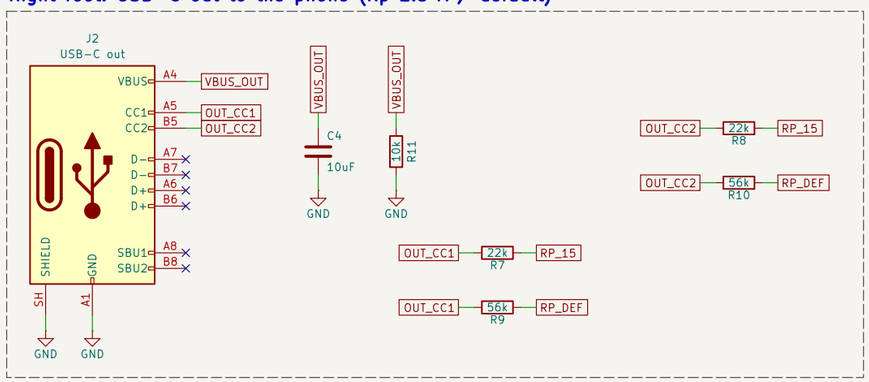


CH32V003: CC detection, switch, current, eyes

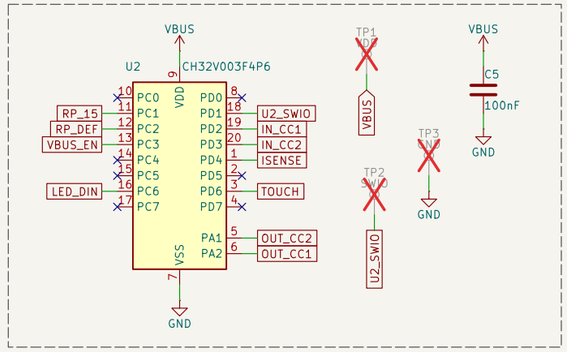


Left eye: WS2812C-2020

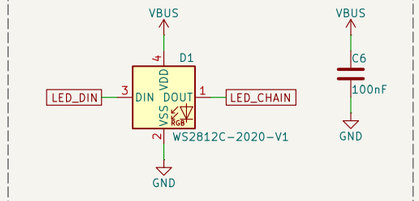

Right eye: WS2812C-2020

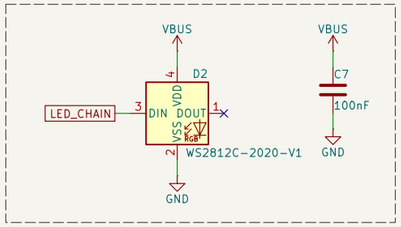

The antenna: tap for night mode

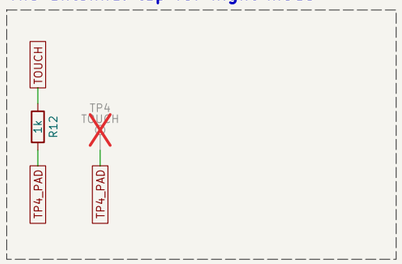

Kickstand tab 1

H1
Breakaway

Kickstand tab 2

H2
Breakaway


Kickstand tab 3

H3
Breakaway

Kickstand tab 4

H4
Breakaway

Power flags

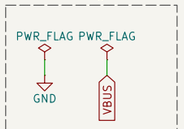

Generated from blocks -> design.json by heypcb-kicad

HeyPCB method / pure KiCad

Sheet: /

File: phone_robot.kicad_sch

Title: Bolt — phone stand robot: USB-C pass-through that measures your pl

Size: A3	Date: 2026-10-05	**Rev: A**
KiCad E.D.A. 10.0.6		Id: 1/1