

2005 Nissan 350Z VQ35DE — Arnès motor / Engine harness print pack

Motor-control loom on the bench (F-series) · ECM MEC61-510 · 2 páginas: EC-123 + fichas

Card · color = contorno · 5V ámbar / 12V rojo / GND verde · Invertida L/R · FSM EC 2005 · OEM · not a service manual

1 · EC-123 INVERTIDA — MEC61-510 · (misma hoja que la portada)

nº pin arriba · código abajo · borde = cable · rojo = bancada · Invertida L/R

121 RW 12V	120 P 12V	119 RW 12V	113 LG/B	112 ·	111 GYL	110 ·	109 WB	108 BR	107 GYR	106 G/OR	6 PL	7 ·	8 ·	9 ·	10 WG	11 P	12 LW	13 WL	14 RL	15 W	16 LG/B	17 ·	18 ·	19 ·	20 ·	21 SB	22 RY	23 RB	24 GY	5 LY	4 LB
·	118 ·	117 GW	105 ·	104 SB	103 ·	102 BNY	101 L/OR	100 ·	99 GY	98 GB	25 PB	26 ·	27 ·	28 ·	29 ·	30 ·	31 ·	32 BNW	33 R	34 Y/B	35 LW	36 ·	37 ·	38 ·	39 ·	40 LG	41 WB	42 BR	43 ·	·	3 G 12V
116 BR GND	115 BW GND	114 ·	97 ·	96 ·	95 ·	94 L C/H	93 ·	92 ·	91 B/OR 5V	90 LG 5V	44 ·	45 GW	46 ·	47 WR 5V	48 PU 5V	49 BY 5V	50 G	51 OR	52 ·	53 ·	54 ·	55 LB	56 WL	57 L	58 W	59 ·	60 PUW	61 LR	62 YR	2 GYR	1 B GND
·	·	·	89 ·	88 ·	87 ·	86 P C/L	85 LG	84 ·	83 GR GND	82 GY GND	63 ·	64 ·	65 ·	66 L GND	67 BNW GND	68 RW 5V	69 Y	70 GR	71 ·	72 ·	73 BNY	74 OR	75 PB	76 LG	77 P	78 BY GND	79 GYR	80 GY	81 GB	·	·

114-121

1-5

Motor rails · BATT 121=R/W · IGN 119=R/W 120=P · GND 1=B 115=B/W 116=B/R · KNK 15 · CKP 13 · CAN 86/94 · coils/inj · AFh 2/24

6-81

PATH A/F + HO2S · sensores → E12■F3 (heaters / poder) → ECM · heaters ECM 2 / 24

A/F Sens 1 B1

FSM · pass/RH · Inv



A/F Sens 1 B2

FSM · driver/LH · Inv



HO2S2 B1

post-cat RH



HO2S2 B2

post-cat LH



A/F heaters / coil-inj 12V rail: E12■F3 (mate en joints abajo)

PATH Knock · sensor → F14/F229 → ECM 15 / GND 116 · otros sensores motor (directo → ECM)

Knock

→F14



F14

FSM H.S. · GND



F229

FSM H.S. · GND



MAF

→ECM 51



CKP POS

→ECM 13



CMP B1

cam RH



CMP B2

cam LH



ECT

coolant



IAT

intake air



ETC throttle

DBW · 5V=47 · TPS



VTC B1

intake cam RH · →ECM 11



VTC B2

intake cam LH · →ECM 10



Coil 1

→ECM 62



Coil 2

→ECM 81



Coil 3

→ECM 61



Coil 4

→ECM 80



Coil 5

→ECM 60



Coil 6

→ECM 79



Inj 1

→ECM 23



Inj 2

→ECM 42



Inj 3

→ECM 22



Inj 4

→ECM 41



Inj 5

→ECM 21



Inj 6

→ECM 40



Joints motor · F103/gnd4 → E17 · Ign condenser · SNS GND · E12■F3 · E10■F1 (battery tray)

F103 gnd4

1/115/116 → E17



E17 body



Ign condenser

noise · near cy3




SNS GND

sensor grounds



E12

8-pin GY · VB 119/120 · IGN

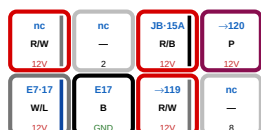

F3

8-pin GY · VB 119/120 · IGN



E10

9-pin GY · START · REV Y/R



F1

9-pin GY · START · REV Y/R

