

Card · color = outline · 5V amber / 12V red / GND green · Inverted L/R · FSM EC 2005 · OEM · not a service manual

pin # top · wire code bottom · border = wire · red = bench · Inverted L/R



1-5

6-81

pin border = wire color · FSM EC-123

SMJ · PG-85 · 46 cavities · A/T = automatic only: 28H PNP · 23H START (EC-644); empty on M/T (EC-646)


SMJ

control harness $\leftrightarrow$ body · 1H–29H + stub





6H

PATH A/F + HO2S · sensors → E12■F3 (heaters / power) → ECM · heaters ECM 2 / 24

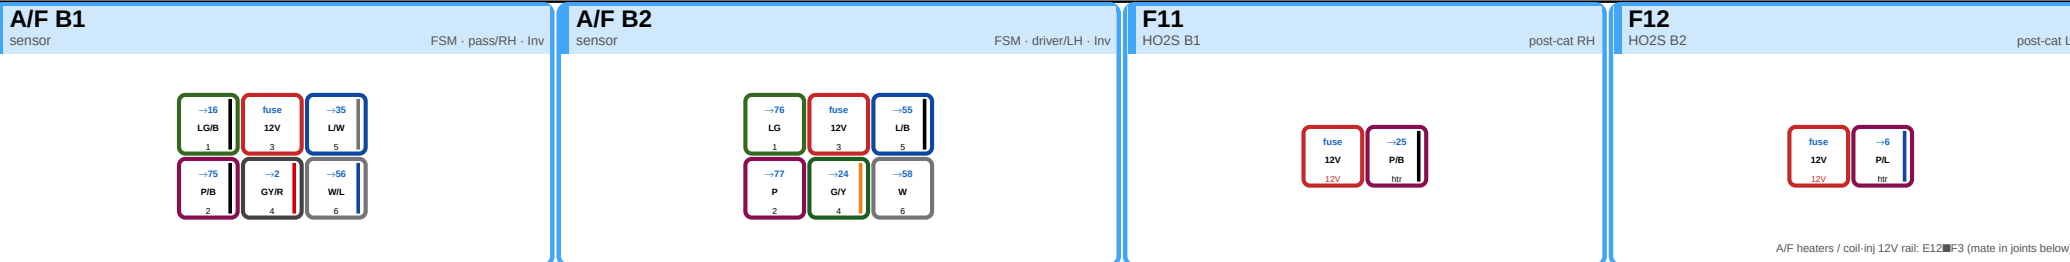

PATH Knock · sensor → F14/F229 → ECM 15 · shield → B/R 116 → F103-4 → F152 · other motor sensors (direct → ECM)

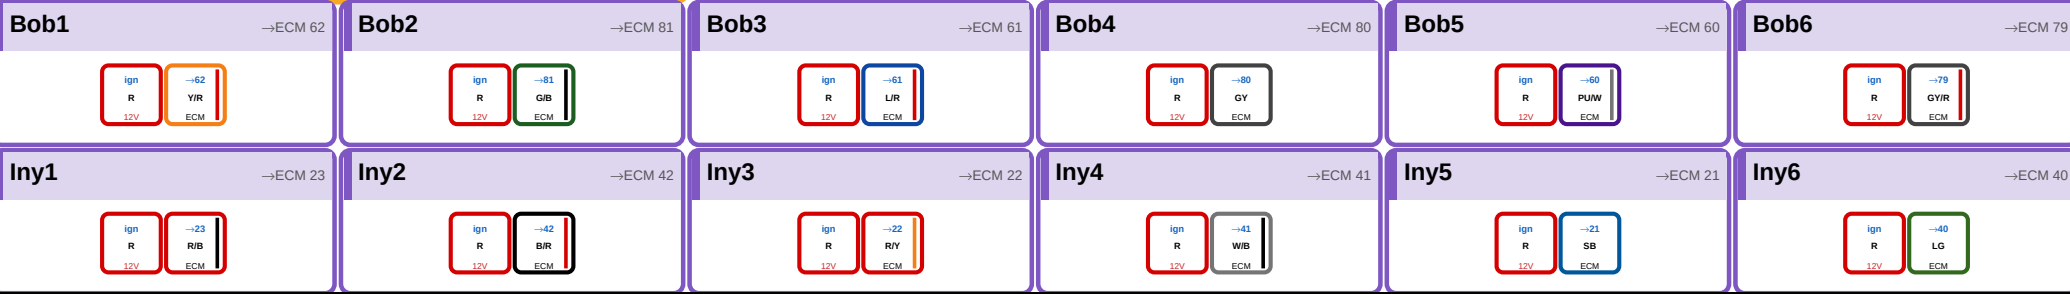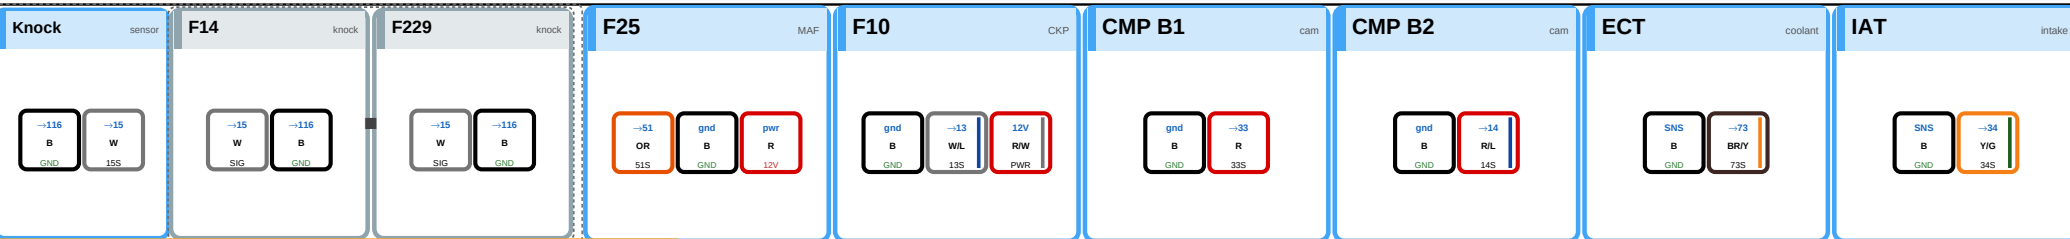

Motor joints · F103/gnd4 → F152 (→F3-6→E17) · Ign condenser · SNS GND · E12■F3 · E10■F1 (battery tray)

