

2005 Nissan 350Z VQ35DE — Arnès motor / Engine harness print pack

Motor-control loom on the bench (F-series) · ECM MEC61-510 · 2 páginas: EC-123 + fichas

Card · color = contorno · 5V ámbar / 12V rojo / GND verde · Invertida L/R · FSM EC 2005 · OEM · not a service manual

1 · EC-123 INVERTIDA — MEC61-510 · (misma hoja que la portada)

nº pin arriba · código abajo · borde = cable · rojo = bancada · Invertida L/R

121	120	119	113	112	111	110	109	108	107	106	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	5	4
R/W	P	R/W	L/G	.	GY/L	.	W/B	B/R	GY/R	G/OR	P/L	.	P	SB	W/G	P	L/W	W/L	R/L	W	L/G	.	.	.	.	SB	RY	R/B	G/Y	L/Y	L/B
.	118	117	105	104	103	102	101	100	99	98	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	.	3
.	.	G/W	.	SB	.	B/Y	L/OR	.	G/Y	G/B	P/B	.	.	.	.	.	.	B/W	R	Y/G	L/W	.	.	.	.	LG	W/B	B/R	.	.	G
116	115	114	97	96	95	94	93	92	91	90	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	2	1
B/R	B/W	.	.	.	.	L	.	.	B/OR	LG	.	G/W	.	W/R	PU	B/Y	G	OR	.	L/B	.	L/B	W/L	L	W	.	P/W	L/R	Y/R	GY/R	B
.	.	.	89	88	87	86	85	84	83	82	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	.	.
.	.	.	.	.	.	P	LG	.	G/R	G/Y	.	.	.	L	B/W	R/W	Y	G/R	.	L/W	B/Y	OR	P/B	LG	P	B/Y	GY/R	GY	G/B	.	.

114-121

ARRIBA 1-121 a la IZQUIERDA

1-5

Motor rails · BATT 121=R/W · IGN 119=R/W 120=P · GND 1=B 115=B/W 116=B/R · KNK 15 · CKP 13 · CAN 86/94 · coils/inj · AFh 2/24

6-81

PATH 5V motor · ETC throttle (DBW) · 5V=47 · SNS TPS→66

ETC throttle


DBW · 5V=47 · motor ± · TPS



PATH A/F + HO2S · sensores → E12■F3 (heaters / poder) → ECM · heaters ECM 2 / 24


A/F Sens 1 B1

FSM · pass/RH · Inv

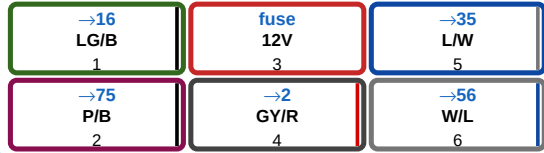

A/F Sens 1 B2

FSM · driver/LH · Inv

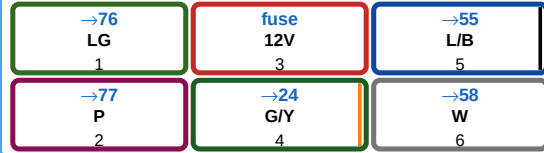


HO2S2 B1

post-cat RH



HO2S2 B2

post-cat LH

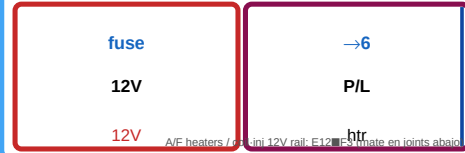


A/F heaters / sensores ini 12V rail: E12■F3 mate en joints abajo

PATH Knock · sensor → F14/F229 → ECM 15 / GND 116 · otros sensores motor (directo → ECM)


Knock

→F14




F14

FSM H.S. · GND



F229

FSM H.S. · GND



MAF

→ECM 51



CKP POS

→ECM 13




CMP B1

cam RH



CMP B2

cam LH

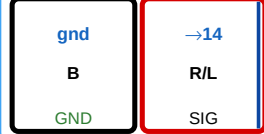

ECT

coolant



IAT

intake air



VTC B1

intake cam RH · →ECM 11



VTC B2

intake cam LH · →ECM 10



Coil 1

→ECM 62



Coil 2

→ECM 81



Coil 3

→ECM 61



Coil 4

→ECM 80



Coil 5

→ECM 60



Coil 6

→ECM 79



Inj 1

→ECM 23



Inj 2

→ECM 42



Inj 3

→ECM 22



Inj 4

→ECM 41



Inj 5

→ECM 21



Inj 6

→ECM 40



Joints motor · F103/gnd4 → E17 · Ign condenser · SNS GND · E12■F3 · E10■F1 (battery tray)

F103 gnd4

1/115/116 → E17




E17 body

ign
gnd



Ign condenser

noise · near cyl3




SNS GND

sensor grounds




E12

8-pin GY · VB 119/120 · IGN

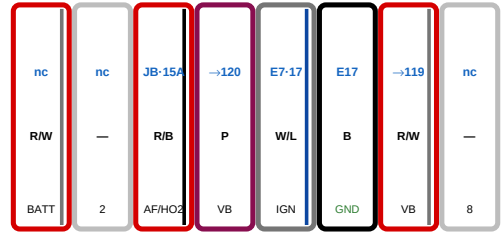


F3

8-pin GY · VB 119/120 · IGN

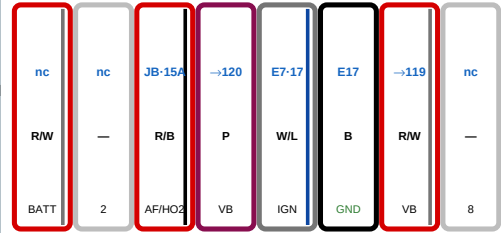

E10

9-pin GY · START · REV Y/R

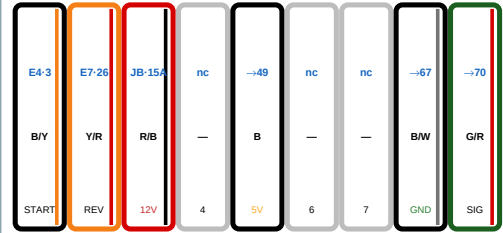

F1

9-pin GY · START · REV Y/R

