

2005 Nissan 350Z VQ35DE — Arnès motor / Engine harness

Motor loom on the bench · EC-123 + fichas · 2 páginas · FSM EC 2005 · OEM · not a service manual

1 · EC-123 INVERTIDA — MEC61-510

nº pin arriba · código abajo · borde = cable · rojo = bancada · Invertida L/R · sin APP / IPDM / body

121 RW	120 P	119 RW	113 LG/B	112 .	111 GYL	110 .	109 WB	108 B/R	107 GYR	106 G/OR	6 PL	7 .	8 P	9 SB	10 WG	11 P	12 L/W	13 WL	14 RL	15 W	16 LG/B	17 .	18 .	19 .	20 .	21 SB	22 R/Y	23 RB	24 GY	5 L/Y	4 LB
	118 .	117 GW	105 .	104 SB	103 .	102 B/R/Y	101 L/OR	100 .	99 GY	98 G/B	25 PB	26 .	27 .	28 .	29 .	30 .	31 .	32 BRW	33 R	34 Y/G	35 L/W	36 .	37 .	38 .	39 .	40 LG	41 WB	42 B/R	43 .		3 G
116 B/R	115 B/W	114 .	97 .	96 .	95 .	94 L	93 .	92 .	91 B/OR	90 LG	44 .	45 GW	46 .	47 W/R	48 PU	49 B/Y	50 G	51 OR	52 .	53 LB	54 .	55 LB	56 WL	57 L	58 W	59 .	60 PUW	61 L/R	62 Y/R	2 GYR	1 B
			89 .	88 .	87 .	86 P	85 LG	84 .	83 G/R	82 G/Y	63 .	64 .	65 .	66 L	67 B/W	68 RW	69 Y	70 G/R	71 .	72 L/W	73 B/R/Y	74 OR	75 PB	76 LG	77 P	78 B/Y	79 GYR	80 GY	81 G/B		
114-121										6-81																	1-5				

Motor rails · BATT 121=R/W · IGN 119=R/W 120=P · GND 1=B 115=B/W 116=B/R · KNK 15 · CKP 13 · CAN 86/94 · coils/inj · AFh 2/24

Arnès motor view — IPDM / body / APP pedal loom omitted (use Completo map for habitáculo + IPDM room)


2 · Fichas Arnès motor · sensor → intermedia F → ECM · outline grupo · 5V ámbar · Invertida

cavidad: id · color · →ECM · 5V=anillo ámbar · 12V rojo / GND verde · sin APP / F102 / IPDM / body

PATH 5V motor · ETC throttle (DBW) · 5V=47 · SNS TPS→66 · (APP pedal / EVAP / A/C / PSP omitidos)

ETC throttle

DBW · 5V=47 · motor ± · TPS




Nota: PATH APP (E113→E11/F2) y sensores body 5V no están en Arnès motor.

PATH A/F + HO2S · sensores → E12■F3 (heaters / poder) → ECM · heaters ECM 2 / 24


A/F Sens 1 B1

FSM · pass/RH · Inv

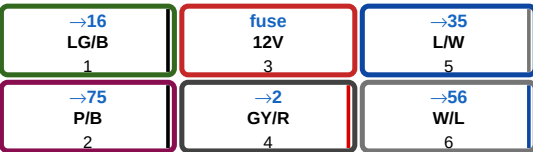

A/F Sens 1 B2

FSM · driver/LH · Inv

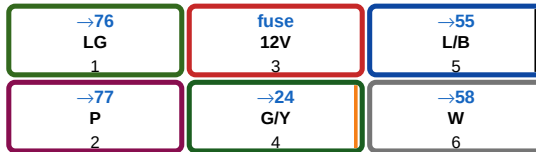


HO2S2 B1

post-cat RH



HO2S2 B2

post-cat LH

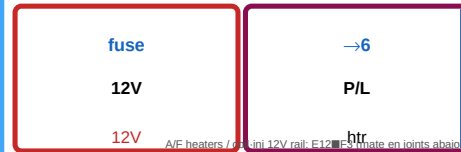


A/F heaters / post-cat LH: ini 12V rail: E12■F3 mate en joints abajo

PATH Knock · sensor → F14/F229 → ECM 15 / GND 116 · otros sensores motor (directo → ECM)

Knock

→F14



F14

FSM H.S. · GND




F229

FSM H.S. · GND




MAF

→ECM 51

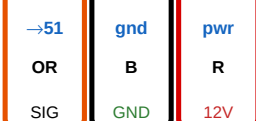

CKP POS

→ECM 13

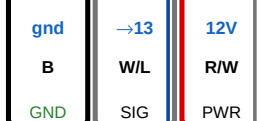

CMP B1

cam RH



CMP B2

cam LH



ECT

coolant



IAT

intake air



VTC B1

intake cam RH · →ECM 11



VTC B2

intake cam LH · →ECM 10



Coil 1

→ECM 62



Coil 2

→ECM 81



Coil 3

→ECM 61



Coil 4

→ECM 80



Coil 5

→ECM 60



Coil 6

→ECM 79



Inj 1

→ECM 23



Inj 2

→ECM 42



Inj 3

→ECM 22



Inj 4

→ECM 41



Inj 5

→ECM 21



Inj 6

→ECM 40



Joints motor · F103/gnd4 → E17 · Ign condenser · SNS GND · E12■F3 · E10■F1 (battery tray)

F103 gnd4

1/115/116 → E17




E17 body

ign
gnd




Ign condenser

noise · near cyl3




SNS GND

sensor grounds




E12

8-pin GY · VB 119/120 · IGN

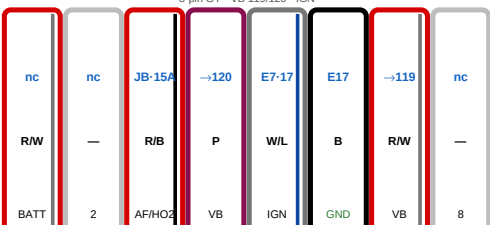


F3

8-pin GY · VB 119/120 · IGN

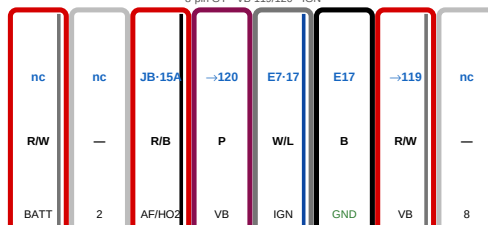

E10

9-pin GY · START · REV Y/R

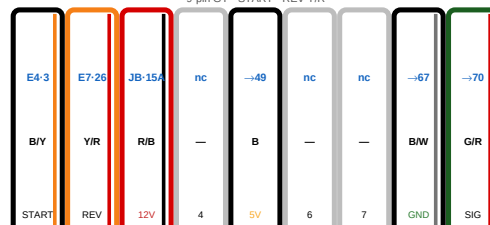

F1

9-pin GY · START · REV Y/R

