




FreeEMS.org			
File: puma.brd			
Sheet: 1/1			
Title: Puma			
Size: A	Date: 14 feb 2011	Rev: Spin 1	
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	ld: 1/1	

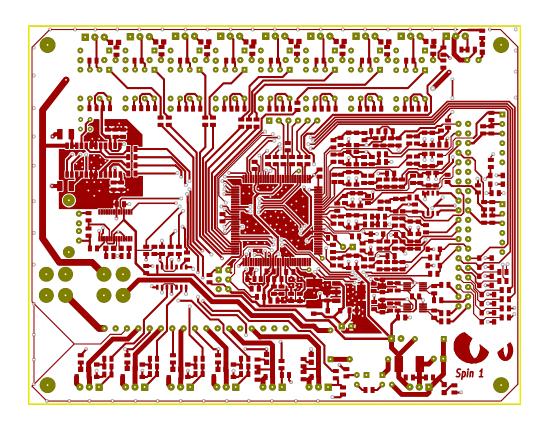


FreeEMS.org			
File: puma.br	d		
Sheet: 1/1			
Title: Puma			
Size: A	Date: 14 feb 2011	Rev: Spin 1	
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	ld: 1/1	

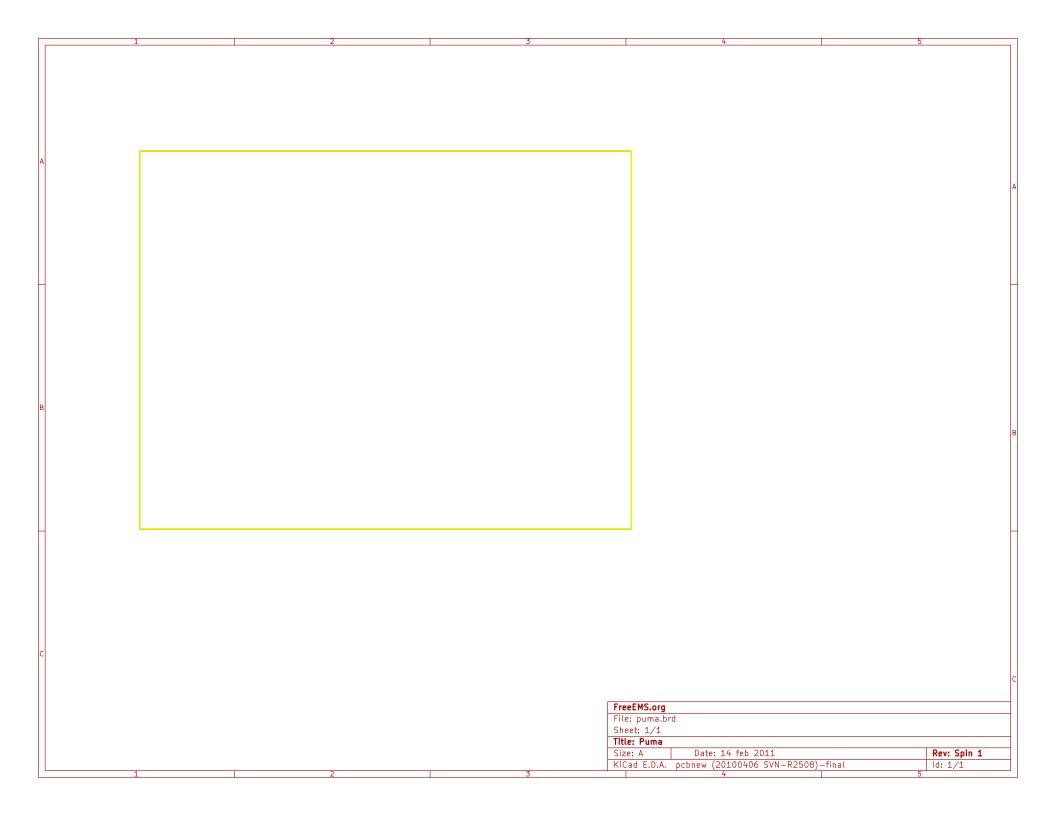

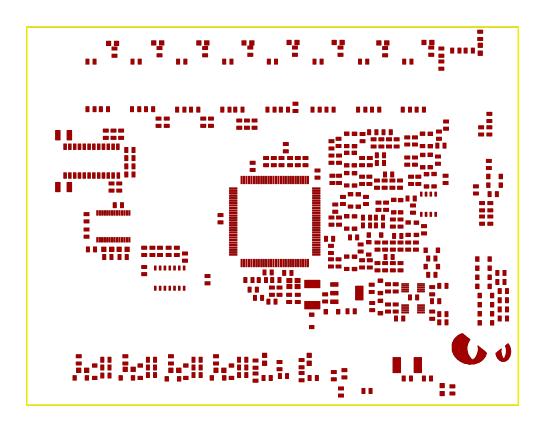

FreeEMS.org				
File: puma.br	d			
Sheet: 1/1				
Title: Puma				
Size: A	Date: 14 feb 2011	Rev: Spin 1		
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	ld: 1/1		

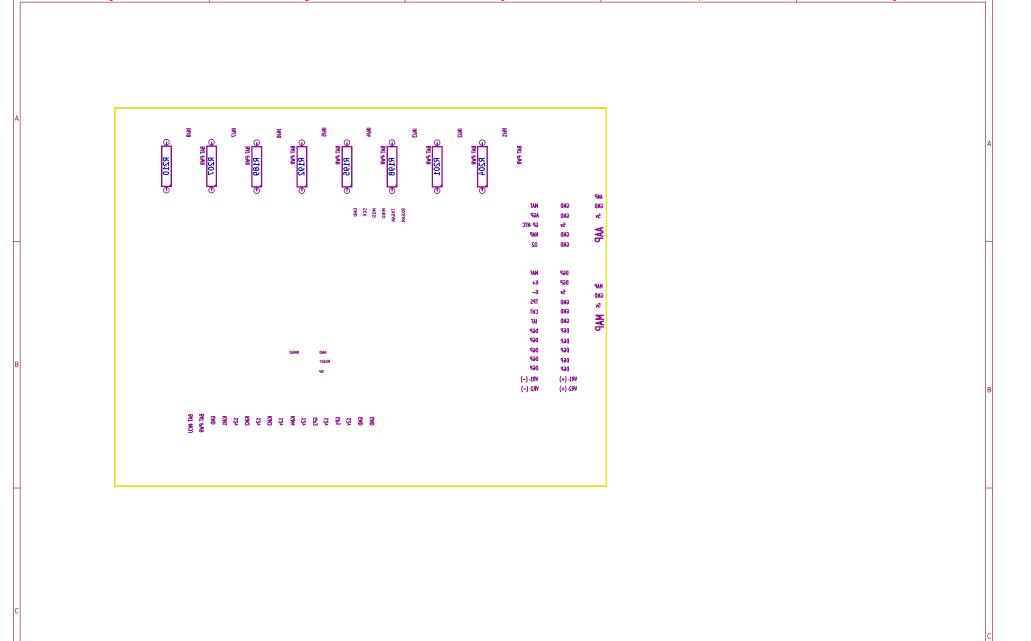

 FreeEMS.org


 File: puma,brd

 Sheet: 1/1


 Title: Puma

 Size: A
 Date: 14 feb 2011
 Rev: Spin 1


 KiCad E.D.A. pcbnew (20100406 SVN-R2508)-final
 Id: 1/1

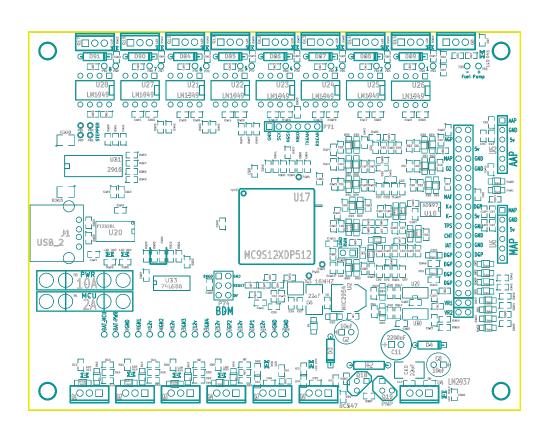

FreeEMS.org		
File; puma,brd		
Sheet: 1/1		
Title: Puma		
Size: A	Date: 14 feb 2011	Rev: Spin 1
KiCad F D A	nchnew (20100406 SVN-R2508)-final	Id+ 1 /1

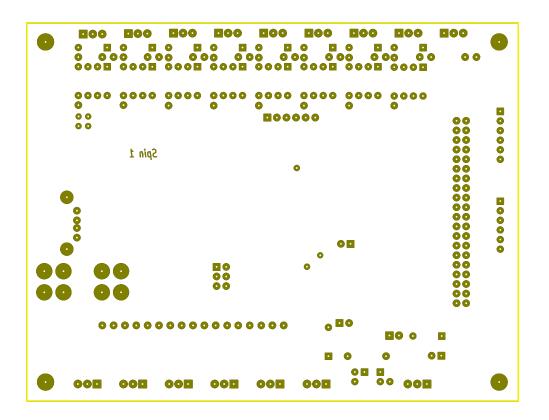

FreeEMS.org				
File: puma.brd				
Sheet: 1/1				
Title: Puma				
Size: A	Date: 14 feb 2011	Rev: Spin 1		
KiCad E.D.A.	pcbnew (20100406 SVN-R2508)-final	ld: 1/1		

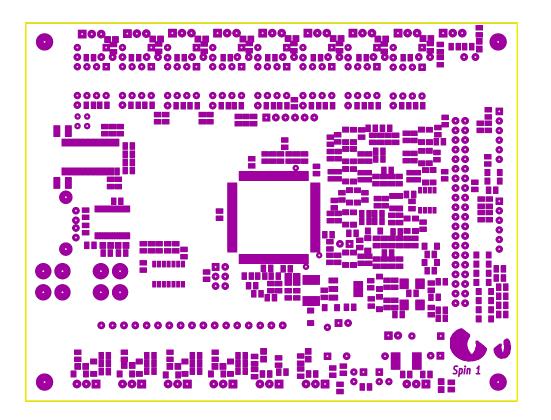

FreeEMS.org			
File: puma.brd			
Sheet: 1/1			
Title: Puma			
Size: A	Date: 14 feb 2011	Rev: Spin 1	
KiCad E.D.A.	pcbnew (20100406 SVN—R2508)—final	ld: 1/1	

